

## Table of Contents

Section Title	No.	Section Title	No.
<b>Precautions</b>	<b>00</b>	<b>Driveline / Axle</b>	<b>3</b>
Precautions	00	Precautions	3
<b>General Information</b>	<b>0</b>	Drive Chain / Drive Train / Drive Shaft	3A
General Information	0A	<b>Brakes</b>	<b>4</b>
Maintenance and Lubrication	0B	Precautions	4
Service Data	0C	Brake Control System and Diagnosis	4A
<b>Engine</b>	<b>1</b>	Front Brakes	4B
Precautions	1	Rear Brakes	4C
Engine General Information and Diagnosis	1A	ABS	4E
Emission Control Devices	1B	<b>Transmission / Transaxle</b>	<b>5</b>
Engine Electrical Devices	1C	Precautions	5
Engine Mechanical	1D	Manual Transmission	5B
Engine Lubrication System	1E	Clutch	5C
Engine Cooling System	1F	<b>Steering</b>	<b>6</b>
Fuel System	1G	Precautions	6
Ignition System	1H	Steering General Diagnosis	6A
Starting System	1I	Steering / Handlebar	6B
Charging System	1J	<b>Body and Accessories</b>	<b>9</b>
Exhaust System	1K	Precautions	9
<b>Suspension</b>	<b>2</b>	Wiring Systems	9A
Precautions	2	Lighting Systems	9B
Suspension General Diagnosis	2A	Combination Meter / Fuel Meter / Horn	9C
Front Suspension	2B	Exterior Parts	9D
Rear Suspension	2C	Body Structure	9E
Wheels and Tires	2D		