












 















0B











Periodic Maintenance Schedule Chart

NOTE:

- **I = Inspect and clean, adjust, replace or lubricate as necessary.**
R = Replace.
T = Tighten.
- **(CA. only)** means that the item or the maintenance is to be applied for the California model.

Item		Interval					
		km	1000	6000	12000	18000	24000
		miles	600	4000	7500	11000	14500
		months	2	12	24	36	48
Air cleaner element (I:  , R: )		—	I	I	R	I	
Exhaust pipe bolts and muffler bolts (T: )		T	—	T	—	T	
Exhaust control valve (I: )		I	—	I	—	I	
Valve clearance (I: )		—	—	—	—	I	
Spark plugs (I:  , R: )		—	I	R	I	R	
Fuel line (I:  , R: )		—	I	I	I	I	
		Replace every 4 years.					
Engine oil (R: )		R	R	R	R	R	
Engine oil filter (R: )		R	—	—	R	—	
Idle speed (I: )		I	I	I	I	I	
Throttle cable play (I: )		I	I	I	I	I	
Throttle valve synchronization (I: )		I (CA. only)	—	I	—	I	
EVAP control system (If equipped) (I:  , R: )		—	—	I	—	I	
		Replace EVAP hose 4 years.					
Cooling system		—	I	I	I	I	
Engine coolant (R: )	“SUZUKI SUPER LONG LIFE COOLANT” (Blue)	Replace every 4 years or 48000 km (29000 miles)					
	“SUZUKI LONG LIFE COOLANT” (Green) or an engine coolant other than “SUZUKI SUPER LONG LIFE COOLANT” (Blue)	—	—	R	—	R	
Radiator hose (I: )		—	I	I	I	I	
Clutch hose (I:  , R: )		—	I	I	I	I	
		Replace every 4 years.					
Clutch fluid (I:  , R: )		—	I	I	I	I	
		Replace every 2 years.					
Drive chain (I:  , I: )		I	I	I	I	I	
		Clean and lubricate every 1000 km (600 miles).					
Brakes (I: )		I	I	I	I	I	
Brake hose (I:  , R: )		—	I	I	I	I	
		Replace every 4 years.					

Brake fluid (I:  , R: )	—	I	I	I	I
	Replace every 2 years.				
Tires (I: )	—	I	I	I	I
Steering (I: )	I	—	I	—	I
Front forks (I: )	—	—	I	—	I
Rear suspension (I: )	—	—	I	—	I
Chassis bolts and nuts (T: )	T	T	T	T	T
Lubrication (I: )	Lubricate at every 1000 km (600 miles).				