

REVISED MAINTENANCE SCHEDULE FOR DL1000AL4 MODELS

Interval: The service interval should be based on the odometer reading or on calendar months, whichever occurs first.

Item		Interval					
		km	1000	12000	24000	36000	48000
		miles	600	7500	15000	22500	30000
		months	2	12	24	36	48
Air cleaner element		—	I	I	R	I	
Exhaust pipe bolts and muffler bolts		T	T	T	T	T	
Exhaust control valve		I	—	I	—	I	
Valve clearances		Inspect every 24000 km (15000 miles)					
Spark plugs		—	I	R	I	R	
Fuel lines		—	I	I	I	I	
		Replace every 4 years.					
Engine oil		R	R	R	R	R	
Engine oil filter		R	—	R	—	R	
Idle speed		I	I	I	I	I	
Throttle cable play		I	I	I	I	I	
Throttle valve synchronization		—	I	I	I	I	
EVAP control system (If equipped)		—	I	I	I	I	
		Replace vapour hose every 4 years.					
Cooling system		—	I	I	I	I	
Engine coolant	"Suzuki SUPER Long Life' coolant" (Blue)	—	—	—	—	R	
	"Suzuki Long Life" coolant (Green) or an engine coolant other than "Suzuki SUPER Long Life coolant" (Blue)	—	—	R	—	R	
Radiator hoses		—	I	I	I	I	
Clutch hose		—	I	I	I	I	
		Replace every 4 years.					
Clutch fluid		—	I	I	I	I	
		Replace every 2 years.					
Drive chain		I	I	I	I	I	
		Clean and lubricate every 1000 km (600 miles).					
Brakes		I	I	I	I	I	
Brake hose		—	I	I	I	I	
		Replace every 4 years.					
Brake fluid		Inspect every year or 6000 km. Replace every 2 years.					
Tyres		—	I	I	I	I	
Steering		I	I	I	I	I	
Front forks		—	I	I	I	I	
Rear suspension		—	I	I	I	I	
Chassis bolts and nuts		T	T	T	T	T	
Lubrication		Lubricate at every 1000 km (600 miles).					

NOTE:

- This table shows the service schedule up to 30,000 miles or 48 months.
- A first service is due after 600 miles or 2 months, whichever occurs first.
- Beyond 30,000 miles or 48 months repeat the schedule from 7500 miles.