

0B



Idle Speed Inspection

- 1) Warm up the engine.
- 2) Inspect the idle speed. When the idle speed is out of prescribed value, check conditions of air intake and operations of ISC valve, etc. Refer to [DTC P0506 \(C65\)](#) and [DTC P0507 \(C65\)](#).

NOTE:

The idle speed is automatically regulated by ISC valve. Therefore, the engine is not equipped with a regulating adjuster.

Idle speed**1200 ± 100 rpm**