



1D



## Air Cleaner Element Inspection

Refer to [Air Cleaner Element Removal and Installation](#).

**1)** Inspect the air cleaner element for clogging. If it is clogged with dirt, replace it with a new one.


**NOTICE:**

- Do not blow the air cleaner element with compressed air.
- If driving under dusty conditions, replace the air cleaner element more frequently. Make sure that the air cleaner is in good condition at all times. Life of the engine depends largely on this component.



**2)** Remove the IAP sensor (#2). 

**3)** Remove the drain plug (1) and drain water from the air cleaner box.

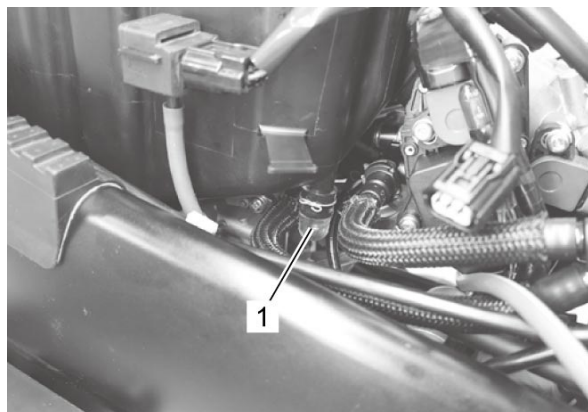

**4)** Install the drain plug and IAP sensor (#2).