



1D




## Air Cleaner Element Removal and Installation


Refer to [Fuel Tank Removal and Installation](#).

### Removal

- 1) Remove the air cleaner cover (1).

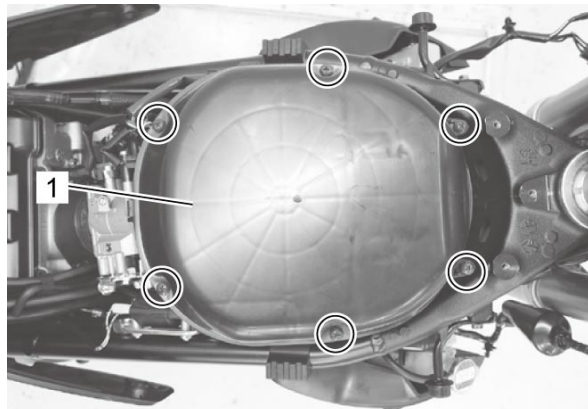

- 2) Remove the air cleaner element (1).

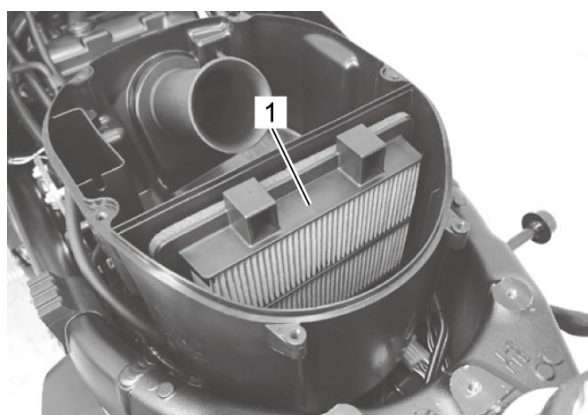

### Installation

Install the air cleaner element in the reverse order of removal.