

1E



Oil Filter Replacement


- 1) Drain engine oil.
- 2) Remove the oil filter (1) with the special tool.

NOTE:

Detach the special tool once the oil filter has come loose, and then remove the filter by hand.

Special Tool

(A): [09915-40620](#)

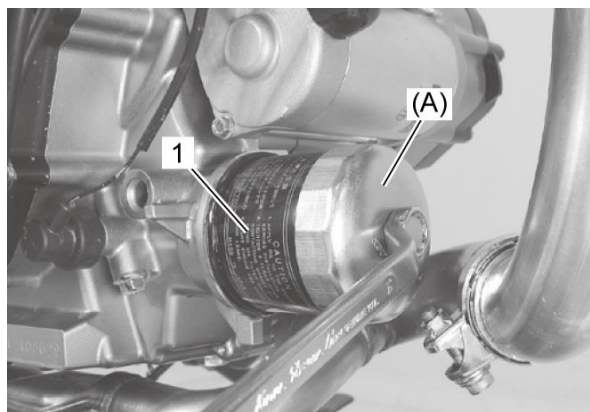

- 3) Apply engine oil lightly to the O-ring of new oil filter (1) before installation.

NOTICE:

ONLY USE A GENUINE SUZUKI MOTORCYCLE OIL FILTER.

Other manufacturer's oil filters may differ in thread specifications (thread diameter and pitch), filtering performance and durability which may lead to engine damage or oil leaks. Also, do not use a genuine Suzuki automobile oil filter on this motorcycle.

- 4) Install a new oil filter. Turn it by hand until you feel that the oil filter O-ring contacts the oil filter mounting surface. Then, tighten the oil filter two full turns (or to specified torque) with the special tool.

NOTE:


To properly tighten the oil filter, use the special tool. Never tighten the oil filter by hand only.


Special Tool

(A): [09915-40620](#)

Tightening torque

Oil filter (a): 20 N·m (2.0 kgf-m, 14.5 lbf-ft)

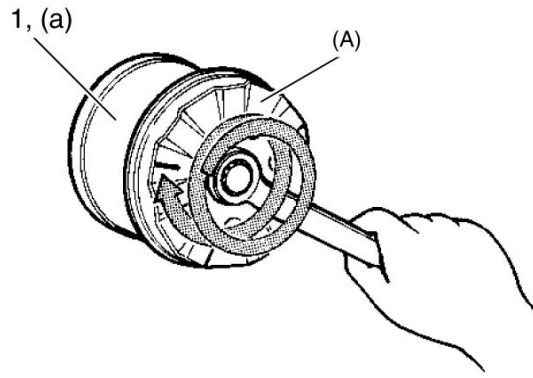

5) Add new engine oil. 

6) Check the engine oil level. 