

1H



Spark Plug Inspection

Refer to [Spark Plug Removal and Installation](#).


Spark Plug Gap

Measure the spark plug gap "a" using a thickness gauge.

Adjust the spark plug gap if necessary.

Spark plug gap

Standard: 0.8 – 0.9 mm (0.031 – 0.035 in)

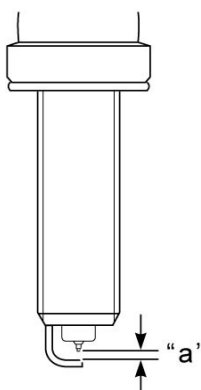

Electrodes Condition

Check the worn or burnt condition of the electrodes.

If it is extremely worn or burnt, replace the spark plug. And also replace the spark plug if it has a broken insulator, or damaged thread.

NOTICE:

Confirm the thread size and reach when replacing the spark plug. If the reach is too short, carbon will be deposited on the screw portion of the spark plug hole and engine damage may result.