


1K




## Exhaust Control Valve Inspection


- 1) Check the EXCVA (1) for its smooth movement when the ignition switch is turned on. If the EXCVA does not move smoothly, check EXCVA electrical circuit. Refer to [EXCVA Inspection](#).

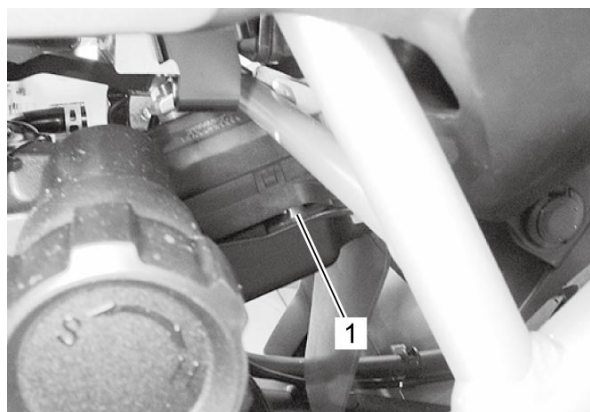

- 2) Turn the ignition switch OFF.
- 3) Check the lock-nuts (1) for tightness. If the lock-nuts (1) are loose, tighten them after adjusting the cable length. Refer to [EXCVA / EXCV Cable Removal and Installation](#).

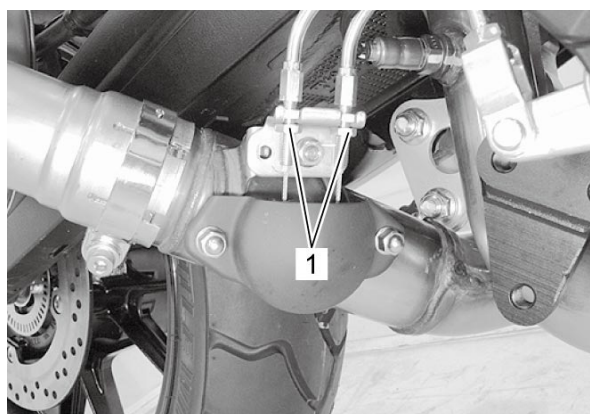

- 4) Check that the EXCV pulley (1) rotates to full open/close stopper positions, when turning the ignition switch ON.
- 5) Check that the voltage of EXCVA position sensor is within specification. If not, perform EXCVA adjustment. Refer to [EXCVA Adjustment](#).

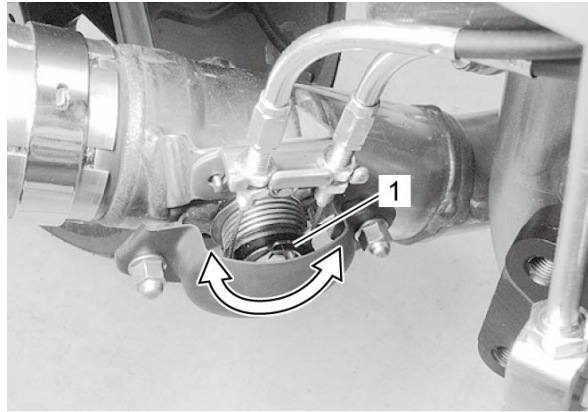

**6)** Turn the ignition switch OFF.