


4A



Rear Brake Light Switch Inspection

- 1) Remove the seat.
- 2) Disconnect the rear brake light switch lead wire couplers (1).

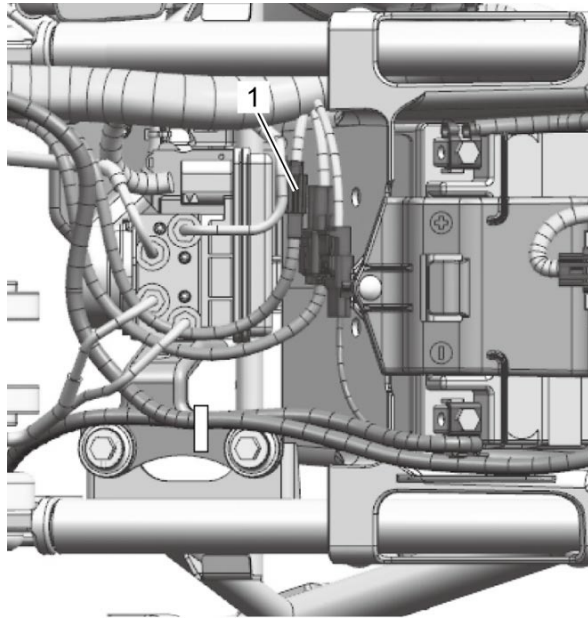

- 3) Inspect the switch for continuity with a tester.
If any abnormality is found, replace the rear brake light switch with a new one.

Color Position	Terminal (O)	Terminal (O/W)
OFF		
ON		



- 4) Connect the rear brake light switch lead wire couplers.
- 5) Install the seat.