

4A




Brake Pedal Height Inspection and Adjustment

- 1) Inspect the brake pedal height "a" between the pedal top face and footrest. Adjust the brake pedal height if necessary.

Brake pedal height "a"


Standard: 20 – 30 mm (0.8 – 1.2 in)

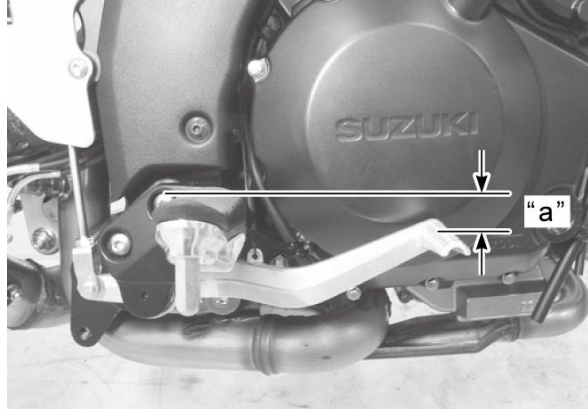

- 2) Loosen the lock-nut (1).
- 3) Turn the push rod (2) in or out until the brake pedal height is within the specification.
- 4) Tighten the lock-nut (1) securely.

Tightening torque

Rear brake master cylinder rod lock-nut (a): 18 N·m (1.8 kgf-m, 13.0 lbf-ft)

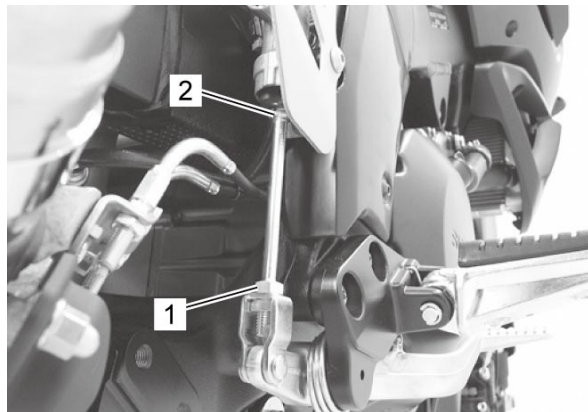

- 5) After finishing the brake pedal height inspection and adjustment, check the rear brake light switch.