

Section 1

Engine

CONTENTS

Precautions 1-1**Precautions..... 1-1**

Precautions for Engine..... 1-1

Precautions for Identification of Cylinder..... 1-1

Precautions for DTC Trouble Shooting 1-1

Engine General Information and**Diagnosis 1A-1****General Description 1A-1**

Injection Timing Description 1A-1

Self-Diagnosis Function 1A-3

Schematic and Routing Diagram 1A-5

FI System Wiring Diagram 1A-5

Component Location 1A-7

FI System Component Location..... 1A-7

Diagnostic Information and Procedures 1A-8

Engine Symptom Diagnosis 1A-8

DTC Check with Mode Select Switch..... 1A-13

DTC Check with SDS..... 1A-13

DTC Clearance with SDS..... 1A-14

Monitoring Failure Detection Data with SDS..... 1A-15

DTC Table..... 1A-16

Fail-Safe Function Table 1A-19

FI System Troubleshooting 1A-19

DTC P0105-H / P0105-L (C17)..... 1A-21

DTC P0110-H / P0110-L (C21)..... 1A-24

DTC P0115-H / P0115-L (C15)..... 1A-26

DTC P0120-H / P0120-L (C14)..... 1A-28

DTC P0130 (C64) 1A-30

DTC P0135 (C64) 1A-33

DTC P0156 (C44) 1A-35

DTC P0161 (C44) 1A-38

DTC P0201 (C32) 1A-40

DTC P0202 (C33) 1A-42

DTC P0230-H / P0230-L (C41)..... 1A-44

DTC P0335 (C12) 1A-46

DTC P0351 (C24) 1A-48

DTC P0352 (C25) 1A-48

DTC P0353 (C26) 1A-48

DTC P0354 (C27) 1A-48

DTC P0443 (C62) (If Equipped)..... 1A-48

DTC P0480 (C60) 1A-50

DTC P0500 (C16) 1A-53

DTC P0506 (C65) 1A-54

DTC P0507 (C65) 1A-56

DTC P0705 (C31) 1A-56

DTC P1500 (C91) 1A-59

DTC P1650 (C42) 1A-60

DTC P1651-H / P1651-L (C23)..... 1A-60

DTC P1654-H / P1654-L (C29)..... 1A-63

DTC P1655 (C28) 1A-65

DTC P1657-H / P1657-L (C46)..... 1A-69

DTC P1658 (C46) 1A-75

DTC P1750-H / P1750-L (C13)..... 1A-77

DTC P2505 (C41) 1A-80

Special Tools and Equipment 1A-81

Special Tool 1A-81

Emission Control Devices 1B-1**Precautions..... 1B-1**

Precautions for Emission Control Devices 1B-1

General Description 1B-1

Fuel Injection System Description..... 1B-1

Crankcase Emission Control System

Description 1B-2

Noise Emission Control System Description..... 1B-3

Evaporative Emission Control System

Diagram (If Equipped) 1B-4

Schematic and Routing Diagram 1B-5

EVAP Canister Hose Routing Diagram (If

Equipped)..... 1B-5

Repair Instructions 1B-7

PCV Hose Inspection 1B-7

PCV Hose Removal and Installation 1B-7

EVAP Control System Removal and

Installation (If Equipped) 1B-7

EVAP Control System Inspection (If

Equipped)..... 1B-8

Specifications 1B-9

Tightening Torque Specifications 1B-9

Engine Electrical Devices 1C-1**Precautions..... 1C-1**

Precautions for Engine Electrical Device 1C-1

General Description 1C-1

ISC Valve System Description 1C-1

Component Location 1C-1

Engine Electrical Components Location 1C-1

1-ii Table of Contents

Diagnostic Information and Procedures	1C-1	Camshaft Removal	1D-7
Engine Symptom Diagnosis	1C-1	Camshaft Installation	1D-9
Repair Instructions	1C-1	Camshaft Inspection	1D-14
Throttle Cable Routing Diagram	1C-1	Valve Clearance Inspection and Adjustment	1D-16
Throttle Body Assembly Components	1C-3	Engine Assembly Removal	1D-20
Throttle Cable Play On-vehicle Inspection and Adjustment	1C-4	Engine Assembly Installation	1D-23
Throttle Body Assembly Removal and Installation	1C-4	Intake Pipe Removal and Installation	1D-25
Throttle Body Disassembly and Reassembly	1C-6	Cam Chain Tension Adjuster / Cam Chain Tensioner / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal	1D-26
Throttle Body Inspection and Cleaning	1C-10	Cam Chain Tension Adjuster / Cam Chain Tensioner / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation	1D-30
Throttle Valve Synchronization	1C-11	Cam Chain Tension Adjuster Inspection	1D-39
ISC Valve (Secondary Throttle Valve Interlinked) Inspection	1C-12	Cam Drive Idle Gear / Sprocket No. 2 Bushing Inspection	1D-40
ISC Aperture Learned Value Reset	1C-12	Valve / Valve Spring Removal and Installation ..	1D-40
ECM Removal and Installation	1C-13	Valve Inspection	1D-42
IAP Sensor Inspection	1C-13	Valve Seat Repair	1D-44
IAP Sensor Removal and Installation	1C-13	Valve Spring Inspection	1D-44
IAT Sensor Inspection	1C-13	Cylinder Head Disassembly and Reassembly ..	1D-45
IAT Sensor Removal and Installation	1C-13	Cylinder Head Inspection	1D-46
ECT Sensor Inspection	1C-14	Valve Guide Replacement	1D-46
ECT Sensor Removal and Installation	1C-14	Cylinder Inspection	1D-47
TP Sensor Inspection	1C-14	Piston Removal and Installation	1D-48
TP Sensor Adjustment	1C-15	Piston Ring Removal and Installation	1D-49
TP Sensor Removal and Installation	1C-15	Piston and Piston Ring Inspection	1D-50
HO2 Sensor Inspection	1C-16	Cam Chain Guide Inspection	1D-51
HO2 Sensor Removal and Installation	1C-16	Cam Chain Tensioner Inspection	1D-52
CKP Sensor Inspection	1C-17	Crankcase Assembly Disassembly	1D-52
CKP Sensor Removal and Installation	1C-17	Crankcase Assembly Reassembly	1D-56
Wheel speed Sensor Inspection	1C-17	Crankshaft Assembly Removal and Installation	1D-59
Wheel Speed Sensor Removal and Installation	1C-18	Crankshaft Journal Bearing Removal and Installation	1D-60
GP Switch Inspection	1C-18	Left Crankcase Disassembly and Reassembly	1D-63
GP Switch Removal and Installation	1C-18	Right Crankcase Disassembly and Reassembly	1D-64
TO Sensor Inspection	1C-18	Crankcase Bearing / Oil Seal Inspection	1D-66
TO Sensor Removal and Installation	1C-18	Conrod Removal and Installation	1D-66
STP Sensor Inspection	1C-18	Conrod / Crankshaft Inspection	1D-68
STP Sensor Adjustment	1C-18	Conrod Crank Pin Bearing Inspection and Selection	1D-69
STP Sensor Removal and Installation	1C-19	Crankshaft Journal Bearing Inspection and Selection	1D-71
STV Actuator Inspection	1C-20	Specifications	1D-72
STV Actuator Removal and Installation	1C-20	Tightening Torque Specifications	1D-72
Specifications	1C-20	Special Tools and Equipment	1D-73
Tightening Torque Specifications	1C-20	Recommended Service Material	1D-73
Special Tools and Equipment	1C-21	Special Tool	1D-73
Recommended Service Material	1C-21		
Special Tool	1C-21		
Engine Mechanical	1D-1	Engine Lubrication System	1E-1
Precautions	1D-1	Precautions	1E-1
Precautions for Engine Mechanical	1D-1	Precautions for Engine Oil	1E-1
Diagnostic Information and Procedures	1D-2	Schematic and Routing Diagram	1E-2
Compression Pressure Check	1D-2	Engine Lubrication System Chart Diagram	1E-2
Repair Instructions	1D-3	Diagnostic Information and Procedures	1E-3
Intake System Components	1D-3	Engine Lubrication Symptom Diagnosis	1E-3
Air Cleaner Element Removal and Installation	1D-4		
Air Cleaner Element Inspection	1D-4		
Air Cleaner Box Removal and Installation	1D-5		
Cylinder Head Cover Removal and Installation	1D-5		

Oil Pressure Check	1E-3	Special Tool	1F-17
Repair Instructions	1E-4	Fuel System	1G-1
Engine Oil Inspection	1E-4	Precautions	1G-1
Engine Oil Replacement	1E-4	Precautions for Fuel System	1G-1
Oil Filter Replacement	1E-5	General Description	1G-2
Oil Strainer / Oil Pressure Regulator Removal and Installation	1E-6	Fuel System Description	1G-2
Oil Strainer Inspection and Cleaning	1E-6	Diagnostic Information and Procedures	1G-3
Oil Pressure Regulator Inspection	1E-6	Fuel System Diagnosis	1G-3
Oil Pressure Switch Removal and Installation	1E-7	Repair Instructions	1G-4
Oil Pressure Switch Inspection	1E-7	Fuel Tank Water Drain Hose and Breather Hose Routing Diagram	1G-4
Oil Jet / Piston Cooling Nozzle Removal and Installation	1E-7	Fuel Feed Hose Disconnection and Reconnection	1G-5
Oil Jet / Piston Cooling Nozzle Inspection	1E-10	Fuel Pressure Inspection	1G-5
Oil Pump Removal and Installation	1E-10	Fuel Discharge Amount Inspection	1G-6
Oil Pump Inspection	1E-10	Fuel Hose Inspection	1G-6
Specifications	1E-11	Fuel Tank Construction	1G-7
Tightening Torque Specifications	1E-11	Fuel Tank Molding Construction	1G-8
Special Tools and Equipment	1E-11	Fuel Tank Removal and Installation	1G-9
Recommended Service Material	1E-11	Fuel Pump Components	1G-10
Special Tool	1E-11	Fuel Pump On-Vehicle Inspection	1G-11
Engine Cooling System	1F-1	Fuel Pump Assembly Removal and Installation	1G-11
Precautions	1F-1	Fuel Pump Disassembly and Reassembly	1G-11
Precautions for Engine Cooling System	1F-1	Fuel Mesh Filter Inspection	1G-13
Precautions for Engine Coolant	1F-1	Fuel Level Gauge Inspection	1G-13
General Description	1F-1	Fuel Pump Relay Inspection	1G-13
Engine Coolant Description	1F-1	Fuel Feed Hose Removal and Installation	1G-14
Schematic and Routing Diagram	1F-1	Fuel Injector / Fuel Delivery Pipe Removal and Installation	1G-14
Cooling Circuit Diagram	1F-1	Fuel Injector Inspection and Cleaning	1G-15
Water Hose Routing Diagram	1F-2	Specifications	1G-15
Diagnostic Information and Procedures	1F-3	Tightening Torque Specifications	1G-15
Engine Cooling Symptom Diagnosis	1F-3	Special Tools and Equipment	1G-15
Repair Instructions	1F-3	Recommended Service Material	1G-15
Engine Coolant Level Inspection	1F-3	Special Tool	1G-15
Engine Coolant Replacement	1F-4	Ignition System	1H-1
Air Bleeding of Engine Cooling System	1F-4	General Description	1H-1
Engine Cooling System Inspection	1F-5	Immobilizer Description (If Equipped)	1H-1
Radiator Cap Inspection	1F-5	Schematic and Routing Diagram	1H-3
Cooling Fan On-Vehicle Inspection	1F-5	Ignition System Diagram	1H-3
Radiator Hose Inspection	1F-6	Ignition System Components Location	1H-3
Radiator / Cooling Fan Motor Removal and Installation	1F-6	Diagnostic Information and Procedures	1H-4
Radiator Inspection and Cleaning	1F-8	Ignition System Symptom Diagnosis	1H-4
Radiator Reservoir Tank Inspection	1F-8	No Spark or Poor Spark	1H-5
Radiator Reservoir Tank Removal and Installation	1F-8	Repair Instructions	1H-6
Water Hose Inspection	1F-9	Ignition Coil Construction	1H-6
Water Hose Removal and Installation	1F-10	Spark Plug Removal and Installation	1H-7
Cooling Fan Relay Inspection	1F-10	Spark Plug Inspection	1H-8
Thermostat Removal and Installation	1F-10	Ignition Coil Removal and Installation	1H-9
Thermostat Inspection	1F-11	Ignition Coil Inspection	1H-9
Water Pump Assembly Components	1F-12	Engine Stop Switch Inspection	1H-10
Water Pump Disassembly and Reassembly	1F-13	Ignition Switch Inspection	1H-10
Water Pump Related Parts Inspection	1F-16	Ignition Switch Removal and Installation	1H-11
Specifications	1F-17	Immobilizer Antenna Removal and Installation (If Equipped)	1H-12
Tightening Torque Specifications	1F-17	Specifications	1H-12
Special Tools and Equipment	1F-17		
Recommended Service Material	1F-17		

1-iv Table of Contents

Tightening Torque Specifications	1H-12	Charging System Components Location	1J-1
Special Tools and Equipment	1H-13	Diagnostic Information and Procedures	1J-2
Recommended Service Material	1H-13	Charging System Symptom Diagnosis	1J-2
Special Tool	1H-13	Battery Runs Down Quickly	1J-3
Starting System	1I-1	Repair Instructions	1J-3
Schematic and Routing Diagram	1I-1	Battery Current Leakage Inspection	1J-3
Starting System Diagram	1I-1	Regulated Voltage Inspection	1J-4
Component Location	1I-1	Generator Inspection	1J-4
Starting System Components Location	1I-1	Generator Removal	1J-5
Diagnostic Information and Procedures	1I-1	Generator Installation	1J-6
Starting System Symptom Diagnosis	1I-1	Regulator / Rectifier Inspection	1J-7
Starter Motor Will Not Run	1I-2	Regulator / Rectifier Removal and Installation	1J-7
Starter Motor Runs But Does Not Crank the Engine	1I-2	Battery Charging	1J-8
Repair Instructions	1I-3	Battery Removal and Installation	1J-10
Starter Motor Components	1I-3	Battery Visual Inspection	1J-10
Starter Motor Assembly Removal and Installation	1I-3	Specifications	1J-11
Starter Motor Disassembly and Reassembly	1I-4	Tightening Torque Specifications	1J-11
Starter Motor Inspection	1I-5	Special Tools and Equipment	1J-11
Starter Relay Removal and Installation	1I-6	Special Tool	1J-11
Starter Relay Inspection	1I-6		
Side-stand Relay Removal and Installation	1I-7	Exhaust System	1K-1
Side-stand / Ignition Interlock System Parts Inspection	1I-7	Precautions	1K-1
Starter Torque Limiter / Starter Clutch Removal and Installation	1I-9	Precautions for Exhaust System	1K-1
Starter Torque Limiter Inspection	1I-12	General Description	1K-1
Starter Clutch Inspection	1I-12	Exhaust Control System Description	1K-1
Starter Button Inspection	1I-13	Exhaust Control System Operation	1K-2
Specifications	1I-13	Repair Instructions	1K-4
Tightening Torque Specifications	1I-13	Exhaust Control System Construction	1K-4
Special Tools and Equipment	1I-14	Exhaust System Components	1K-5
Recommended Service Material	1I-14	Exhaust Control Valve Inspection	1K-6
Special Tool	1I-14	EXCVA / EXCV Cable Removal and Installation	1K-6
Charging System	1J-1	EXCVA Inspection	1K-10
Schematic and Routing Diagram	1J-1	EXCVA Pulley Inspection	1K-10
Charging System Diagram	1J-1	EXCVA Adjustment	1K-10
Component Location	1J-1	Exhaust Pipe / Muffler Removal	1K-13
		Exhaust Pipe / Muffler Installation	1K-15
		Exhaust System Inspection	1K-18
		Specifications	1K-19
		Tightening Torque Specifications	1K-19