

1A



DTC Check with SDS

NOTE:


- Do not disconnect the coupler from ECM, battery cable from battery, ECM ground wire from the engine or main fuse before confirming DTC stored in memory. Such disconnection will erase the memorized information in ECM memory.
- DTC stored in ECM memory can be checked by SDS.

- 1) Remove the seat.
- 2) Set up the SDS tools referring to the SDS operation manual for further details.

Special Tool

(A): [09904-41010](#)

(B): [99565-01010-034](#)

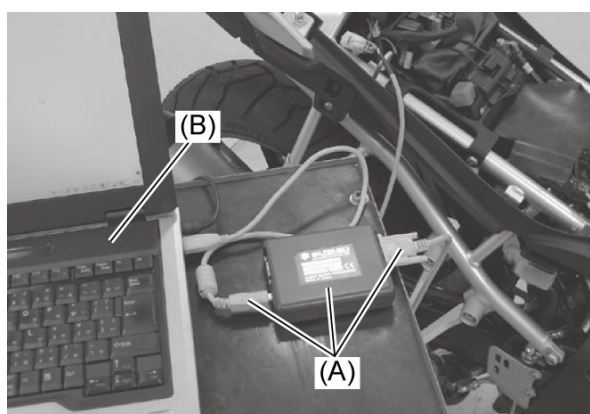

- 3) Click the "DTC inspection" button (1).





- 4) Start the engine or crank the engine for more than 4 seconds.
- 5) Check the DTC to determine the malfunction part.

NOTE:

- **Not only SDS is used for detecting DTCs but also for reproducing and checking on screen the failure condition as described by customers using the trigger.**
- **How to use trigger referring to SDS operation manual for further details.**

- 6) After repairing the trouble, clear to delete history code (Past DTC).