



1A



FI System Component Location

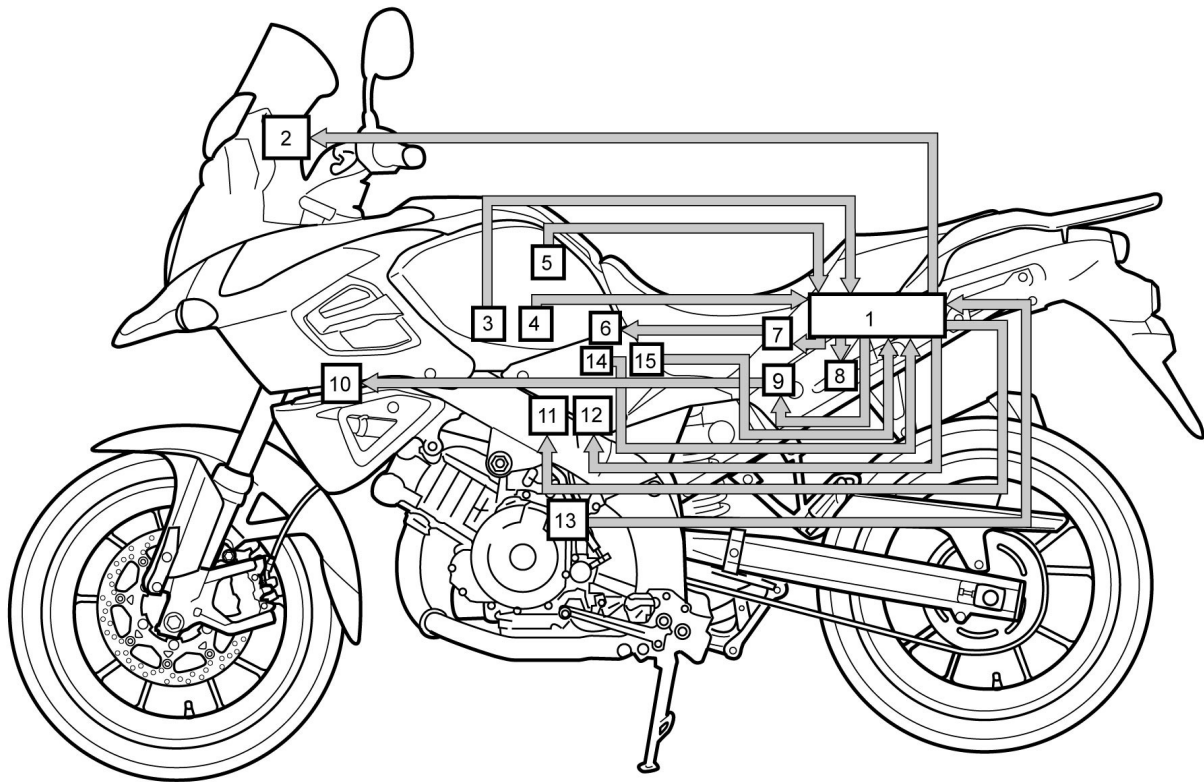

1.	ECM	6.	Fuel pump	11.	Ignition coil #1 (center)
2.	Combination meter	7.	FP relay	12.	Ignition coil #2 (side)
3.	IAP sensor #1	8.	TO sensor	13.	CKP sensor
4.	IAP sensor #2	9.	Cooling fan relay	14.	STVA
5.	IAT sensor	10.	Cooling fan	15.	STP sensor

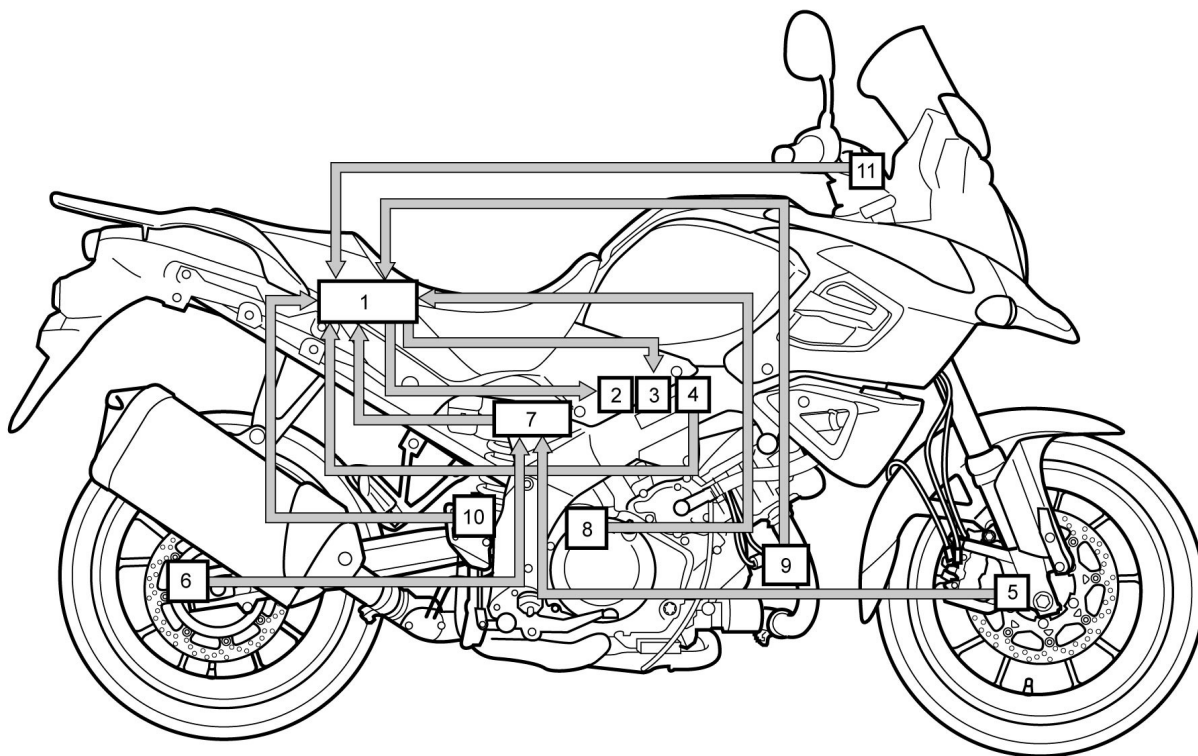

1.	ECM	5.	Front wheel speed sensor	9.	HO2 sensor #1
2.	Ignition coil #2 (center)	6.	Rear wheel speed sensor	10.	HO2 sensor #2
3.	Ignition coil #1 (side)	7.	ABS control unit	11.	Ignition switch (Immobilizer (If equipped))
4.	ECT sensor	8.	GP switch		