
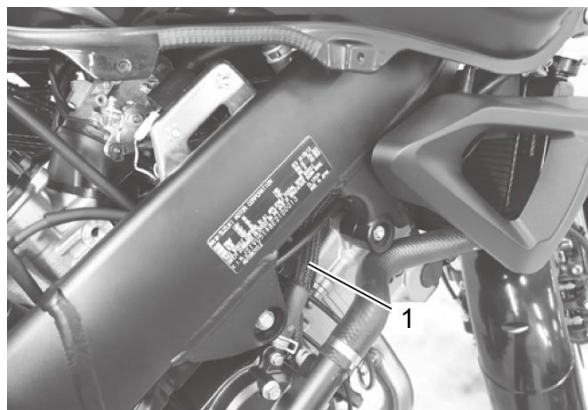


1B

PCV Hose Inspection

- 1)** Lift and support the fuel tank. 
- 2)** Inspect the PCV hose (1) for wear and damage.
If it is worn or damaged, replace the PCV hose with a new one.
- 3)** Check that the PCV hose (1) is securely connected.



- 4)** Install the removed parts.