

1B



## EVAP Control System Removal and Installation (If Equipped)

### Hose

Refer to [EVAP Canister Hose Routing Diagram \(If Equipped\)](#).

### Removal

- 1) Remove the throttle body assembly.
- 2) Remove the left frame cover.
- 3) Remove the EVAP hoses.

### Installation


- 1) Install the EVAP hoses.
- 2) Install the removed parts.

### EVAP Canister


Refer to [EVAP Canister Hose Routing Diagram \(If Equipped\)](#).

### Removal

- 1) Remove the rear fender (Rear).
- 2) Remove the EVAP canister holder (1).

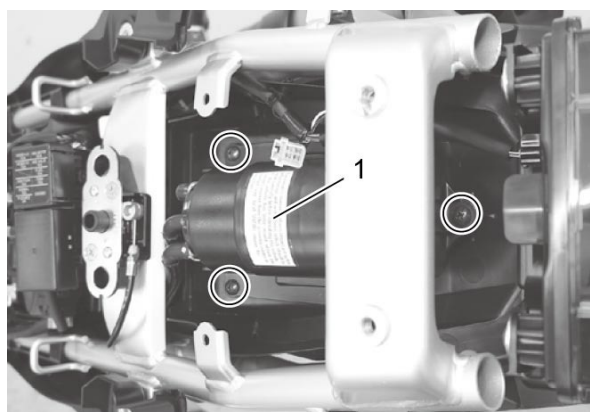

- 3) Disconnect the surge hose (1) and purge hose (2).
- 4) Remove the EVAP canister (3).

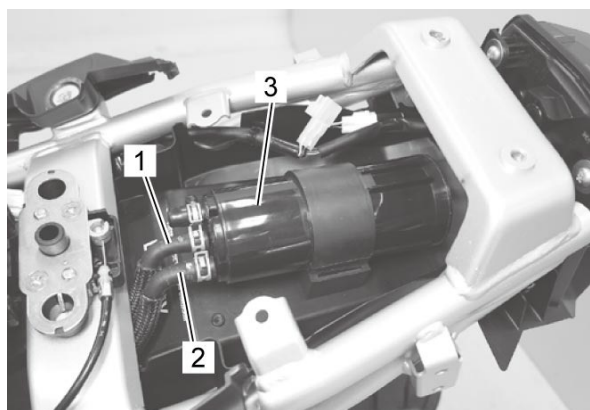




## Installation

Install the EVAP canister in the reverse order of removal.

## EVAP System Purge Control Solenoid Valve

### Removal

- 1) Remove the throttle body assembly.
- 2) Disconnect the purge hose (1).
- 3) Remove the EVAP system purge control solenoid valve (2).

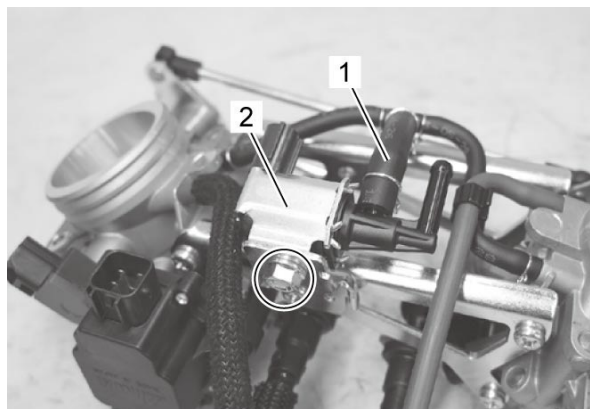


## Installation

- 1) Tighten the EVAP system purge control solenoid valve nut (1) to the specified torque.

### Tightening torque

**EVAP system purge control solenoid valve nut (a): 7 N·m (0.7 kgf-m, 5.0 lbf-ft)**

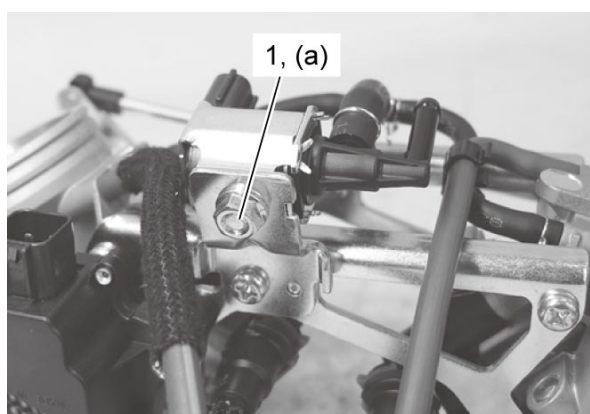


- 2) Install the removed parts.

## Fuel Shut-off Valve

### Removal

- 1) Lift and support the fuel tank.

- 2)** Remove the valve plate No. 1 bolt (1).
- 3)** Disconnect the surge hose (2) and fuel tank breather hose (3).

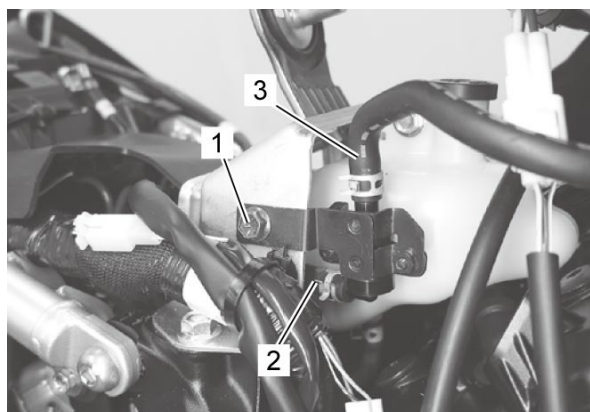

- 4)** Remove the valve plate No. 2 (1) and fuel shut-off valve (2).

