


1C



## ECM Removal and Installation

### Removal

- 1) Disconnect the battery (-) lead wire and remove the tool holder.
- 2) Disconnect the ECM couplers (1) and remove the ECM (2).

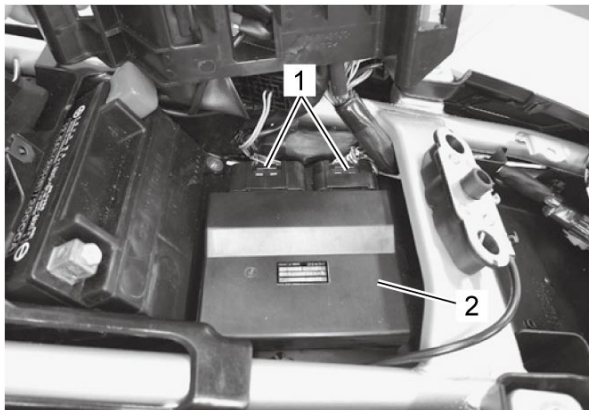

### Installation

Install the ECM in the reverse order of removal.