


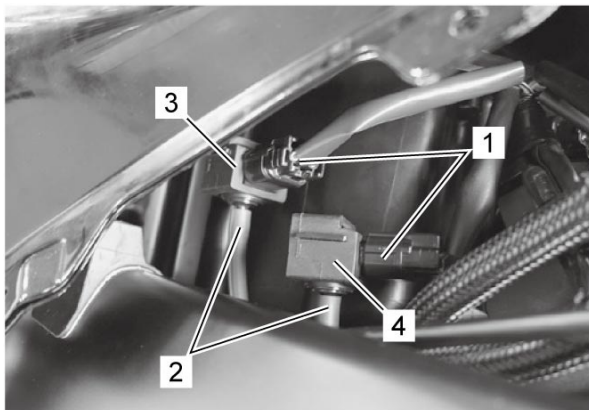
1C



IAP Sensor Removal and Installation

Removal

- 1) Lift and support the fuel tank. 
- 2) Disconnect the IAP sensor couplers (1) and vacuum hoses (2).
- 3) Remove the IAP sensor #1 (3) and #2 (4).



Installation

Install the IAP sensor in the reverse order of removal.