


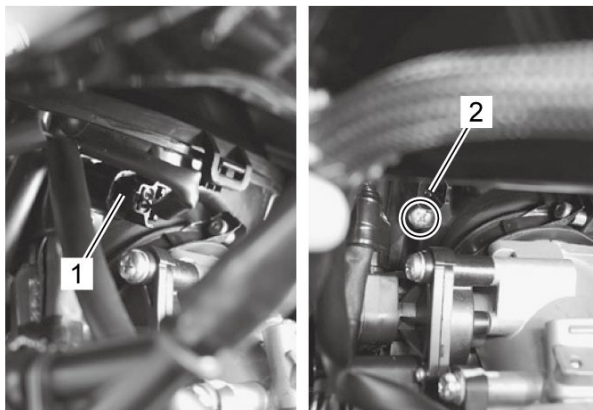
1C



## IAT Sensor Removal and Installation

### Removal

- 1) Lift and support the fuel tank. 
- 2) Disconnect the IAT sensor coupler (1) and remove the IAT sensor (2).



### Installation

#### Reference: IAT Sensor Inspection

Install the IAT sensor in the reverse order of removal. Pay attention to the following point:

- Install the new O-ring (1) and tighten the IAT sensor screw (2) to the specified torque.

#### Tightening torque

**IAT sensor screw (a): 1.3 N·m (0.13 kgf-m, 1.0 lbf-ft)**

