

1C




ECT Sensor Removal and Installation

Removal

- 1) Drain engine coolant.
- 2) Remove the throttle body assembly.
- 3) Disconnect the ECT sensor coupler (1) and remove the ECT sensor (2).

NOTICE:

Take special care when handling the ECT sensor. It may cause damage if it gets an excessive impact.

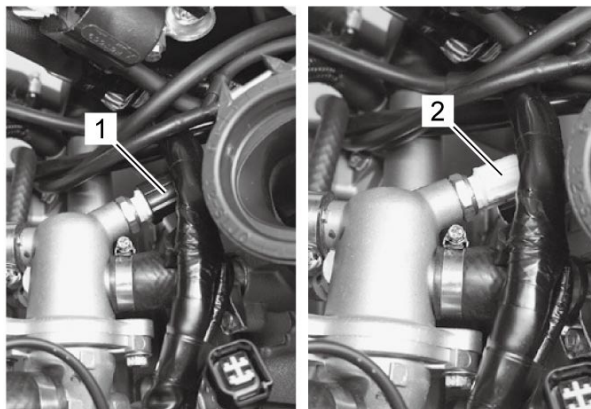

Installation

Reference: ECT Sensor Inspection

Install the ECT sensor in the reverse order of removal.

Pay attention to the following point:

- Install the new gasket washer (1) and tighten the ECT sensor (2) to the specified torque.

Tightening torque

ECT sensor (a): 18 N·m (1.8 kgf-m, 13.0 lbf-ft)

