

1C




TP Sensor Adjustment


- 1) Check that the throttle cable play is within the specification.
- 2) Remove the seat.
- 3) Connect the special tool (Mode select switch) to the mode select coupler.

Special Tool

(A): 09930-82720

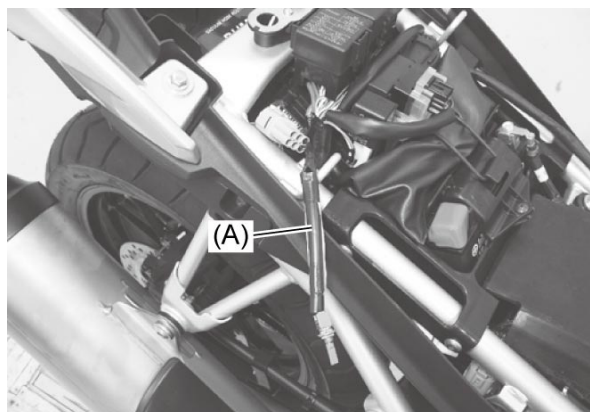

- 4) Turn the mode select switch ON.
- 5) Check the position of the bar in the left of C code displayed on the LCD panel.

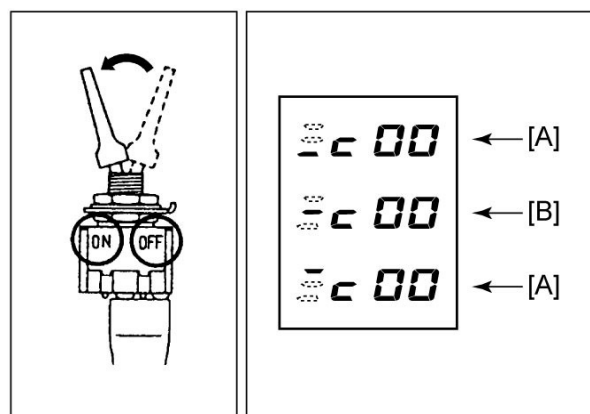


[A]:	Incorrect position	[B]:	Correct position
------	--------------------	------	------------------

- 6) If the TP sensor adjustment is necessary, lift and support the fuel tank.
- 7) Loosen the TP sensor mounting screw (1) with the special tool and turn the TP sensor (2) to bring the bar to the correct position.

Special Tool

09930-11950

- 8) Tighten the TP sensor mounting screw (1) to the specified torque.

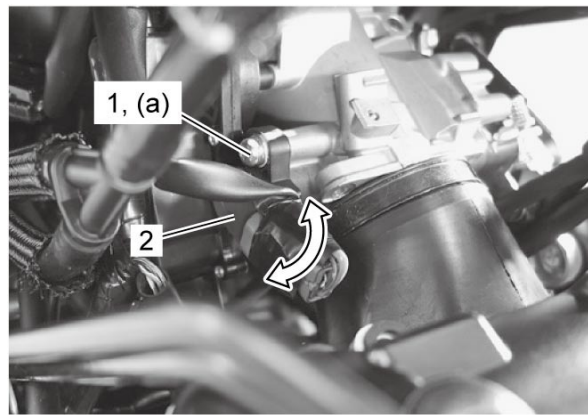Tightening torque**TP sensor mounting screw (a): 3.5 N·m (0.35 kgf-m, 2.5 lbf-ft)**

- 9)** Disconnect the special tool (Mode select switch) and install the removed parts.