


1C




TP Sensor Removal and Installation

Removal

- 1) Turn the ignition switch OFF.
- 2) Lift and support the fuel tank. 
- 3) Disconnect the TP sensor coupler (1).
- 4) Prior to disassembly, mark the sensor's original position with a paint or scribe for accurate reinstallation.
- 5) Remove the TP sensor (2) with the special tool.

Special Tool

09930-11950

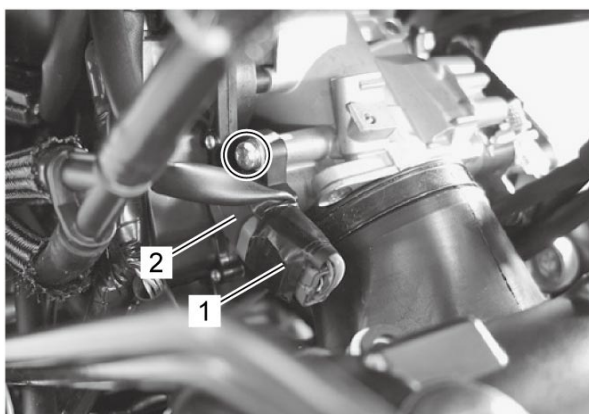

Installation

Install the TP sensor in the reverse order of removal. Pay attention to the following points:



- Apply a thin coat of engine oil to the new O-ring (1).
- With the throttle valve fully closed, install the TP sensor (2) aligning the throttle shaft end (3) with the groove (4) of the TP sensor.
- Tighten the TP sensor mounting screw to the specified torque.

Special Tool

09930-11950

Tightening torque

TP sensor mounting screw (a): 3.5 N·m (0.35 kgf-m, 2.5 lbf-ft)

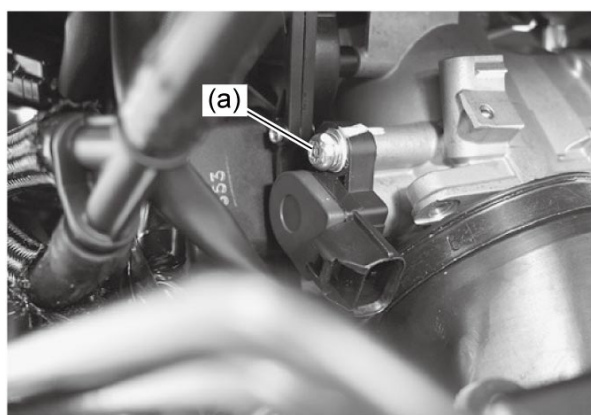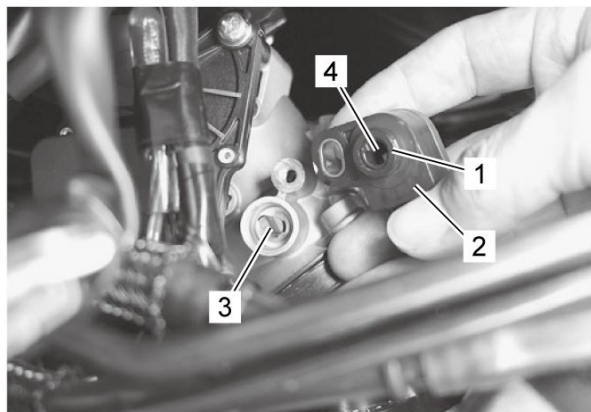

- Check the throttle valve operating smoothly.
- Adjust the position of TP sensor. 