


1C



TO Sensor Removal and Installation

Removal

- 1) Remove the seat.
- 2) Disconnect the coupler (1) and remove the TO sensor (2).

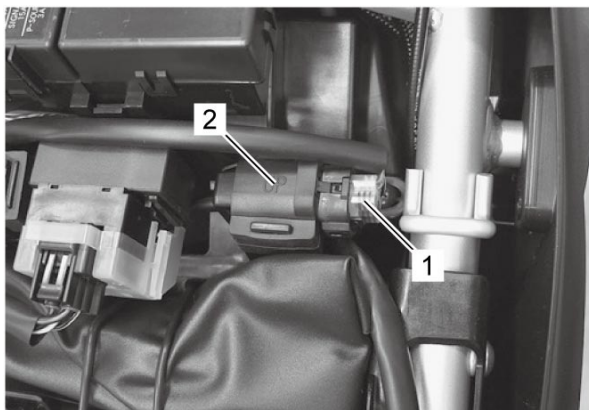

Installation

Install the TO sensor in the reverse order of removal. Pay attention to the following point:

- When installing the TO sensor, bring the "UP" letters (1) upward.

