


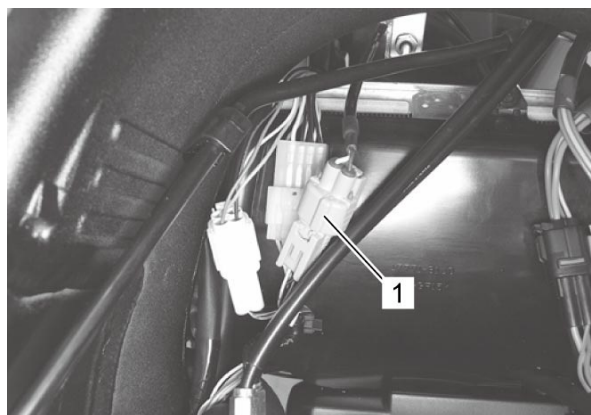
4E




Front Wheel Speed Sensor Removal and Installation


Removal

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box. 
- 3) Disconnect the front wheel speed sensor lead wire coupler (1).



- 4) Remove the front wheel speed sensor mounting bolt (1).

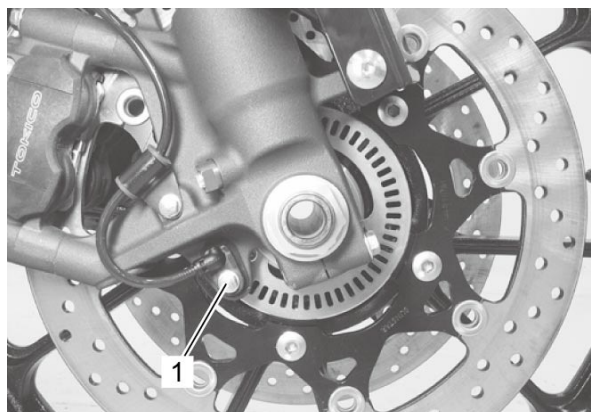


- 5) Remove the front wheel speed sensor as shown in the front wheel speed sensor routing diagram. 

Installation

[Reference: Wheel Speed Sensor and Sensor Rotor Inspection](#)

Install the front wheel speed sensor in the reverse order of removal. Pay attention to the following points:

- Install the front wheel speed sensor as shown in the front wheel speed sensor routing diagram. 
- Check the clearance between the front wheel speed sensor and sensor rotor. Refer to [Wheel Speed Sensor and Sensor Rotor Inspection](#).