


4E




## Rear Wheel Speed Sensor Removal and Installation

### Removal

- 1) Turn the ignition switch OFF.
- 2) Remove the seat.
- 3) Remove the screws (1) and disconnect the clip (2) and hook (3).

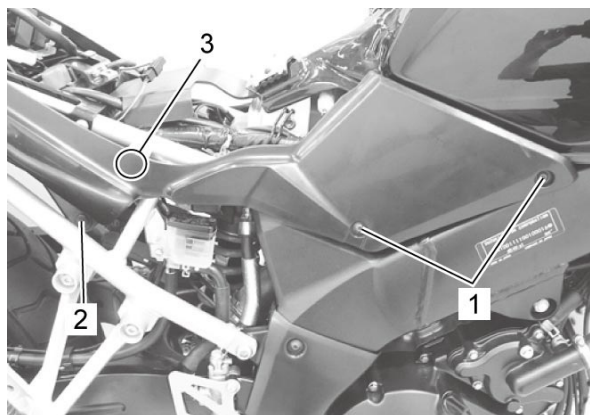


- 4) Disconnect the rear wheel speed sensor lead wire coupler (1).

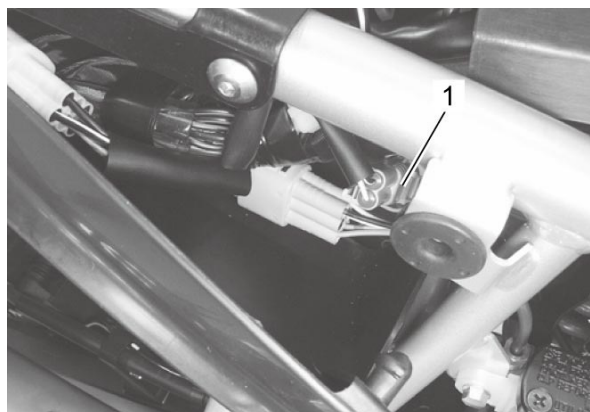

- 5) Remove the rear wheel speed sensor mounting bolt (1).






- 6) Remove the rear wheel speed sensor as shown in the rear wheel speed sensor routing diagram. 

## Installation

### Reference: Wheel Speed Sensor and Sensor Rotor Inspection

Install the rear wheel speed sensor in the reverse order of removal. Pay attention to the following points:

- Install the rear wheel speed sensor as shown in the rear wheel speed sensor routing diagram. 
- Check the clearance between the rear wheel speed sensor and sensor rotor. Refer to [Wheel Speed Sensor and Sensor Rotor Inspection](#).