

1D




Intake Pipe Removal and Installation

Refer to [Throttle Body Assembly Removal and Installation](#).

Removal

Remove the intake pipes (1).

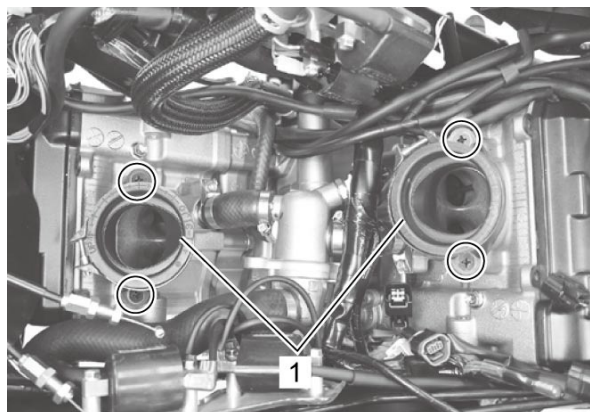


Installation

Install the intake pipe in the reverse order of removal. Pay attention to the following points:

NOTE:

The intake pipe can be identified by the marks.

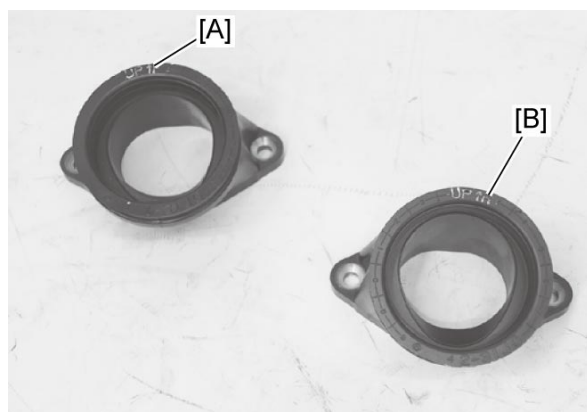

[A]:	F (Front cylinder head intake pipe)
[B]:	R (Rear cylinder head intake pipe)

- Apply grease to the new O-ring and install the intake pipe.

NOTE:

Face the "UP" mark (1) on the intake pipe to upper.

"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)

Tightening torque

Intake pipe mounting screw (a): 8.5 N·m (0.85 kgf-m, 6.5 lbf-ft)

