

1D



Cylinder Head Inspection

Refer to [Cam Chain Tension Adjuster / Cam Chain Tensioner / Cylinder Head Assembly / Cam Chain Guide / Cylinder Removal](#) and [Cam Chain Tension Adjuster / Cam Chain Tensioner / Cylinder Head Assembly / Cam Chain Guide / Cylinder Installation](#).

- 1) Decarbonize the combustion chambers.
- 2) Check the gasket surface of the cylinder head for distortion with a straightedge and thickness gauge, taking a clearance reading at several places as indicated. If the largest reading at any position of the straightedge exceeds the limit, replace the cylinder head.

Special Tool

09900-20803

Cylinder head distortion

Service limit: 0.05 mm (0.002 in)

