

1D




Air Cleaner Box Removal and Installation


Refer to [Fuel Tank Removal and Installation](#).

Removal

- 1) Remove the IAP sensors.
- 2) Remove the IAT sensor.
- 3) Loosen the air cleaner outlet tube clamp screws (1).

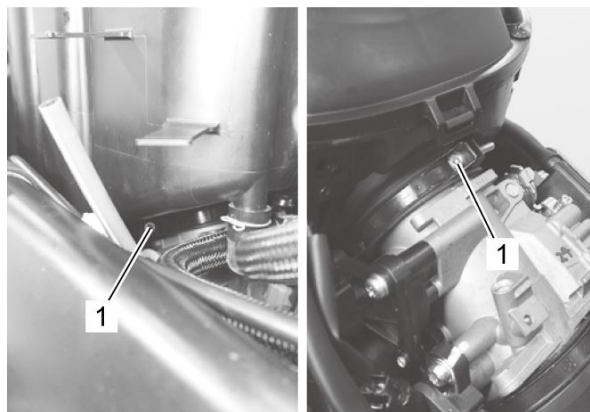

- 4) Disconnect the PCV hose (1) and then remove the air cleaner box (2).

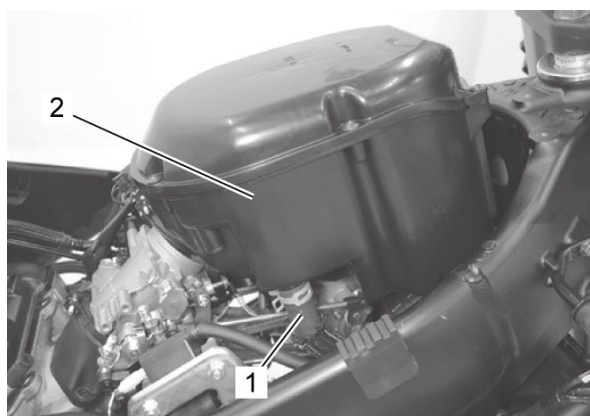

Installation

Install the air cleaner box in the reverse order of removal. Pay attention to the following points:

- Connect the PCV hose. Refer to [Intake System Components](#).
- Position the air cleaner outlet tube clamps and tighten the air cleaner outlet tube clamp screw (1) to the specified torque.

Tightening torque

Air cleaner outlet tube clamp screw (a): 1.5 N·m (0.15 kgf-m, 1.0 lbf-ft)

