


1E



Oil Jet / Piston Cooling Nozzle Inspection

Refer to [Oil Jet / Piston Cooling Nozzle Removal and Installation](#).

Make sure that the oil jets and piston cooling nozzle are not clogged. If they are clogged, clean their oil passage using a wire of the proper size and compressed air.

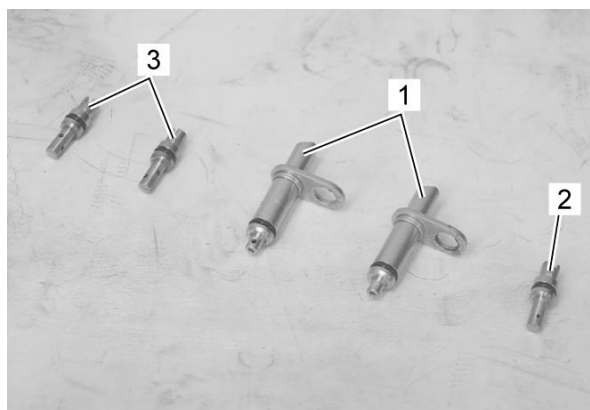

1.	Piston cooling nozzle
2.	Oil jet (for transmission)
3.	Oil jet (for cylinder head)