

1E



Oil Pump Inspection

Refer to [Oil Pump Removal and Installation](#).

Rotate the oil pump by hand and check that it moves smoothly. If it does not move smoothly, replace the oil pump assembly.

