

1E



Oil Pump Removal and Installation


Refer to [Crankcase Assembly Disassembly](#) and [Crankcase Assembly Reassembly](#).

Removal

- 1) Remove the oil pump assembly (1).

NOTICE:

Do not attempt to disassemble the oil pump assembly. The oil pump is available only as an assembly.

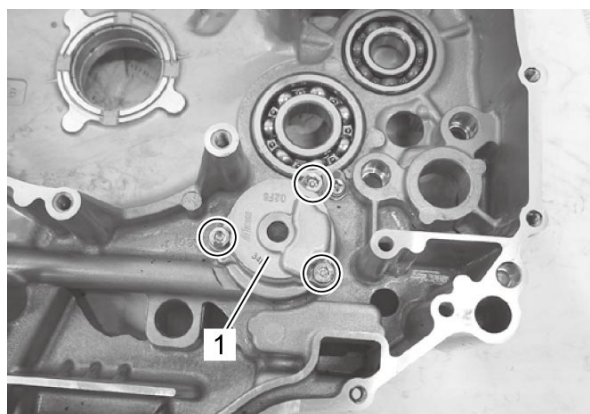

Installation

Reference: [Oil Pump Inspection](#)

Install the oil pump in the reverse order of removal.