

1E




## Engine Oil Replacement

- 1) Keep the motorcycle upright with the center stand.
- 2) Place an oil pan below the engine and remove the oil filler cap (1).
- 3) Drain engine oil by removing the oil drain plug (2).

**NOTE:**


**Warming up of the engine will facilitate draining of the engine oil due to reduction of the oil viscosity.**

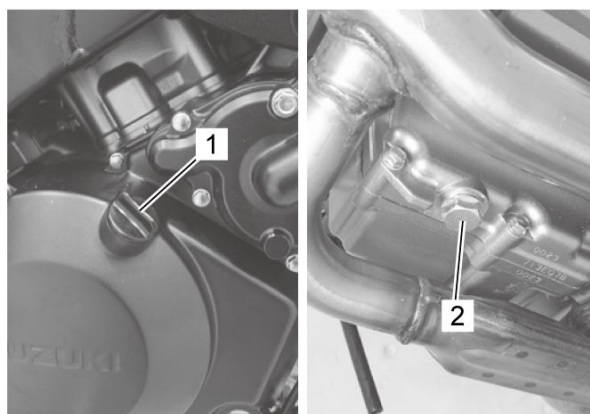

- 4) Install the new gasket washer to the oil drain plug (1).
- 5) Tighten the oil drain plug to the specified torque.

**Tightening torque**

**Oil drain plug (a): 23 N·m (2.3 kgf-m, 17.0 lbf-ft)**

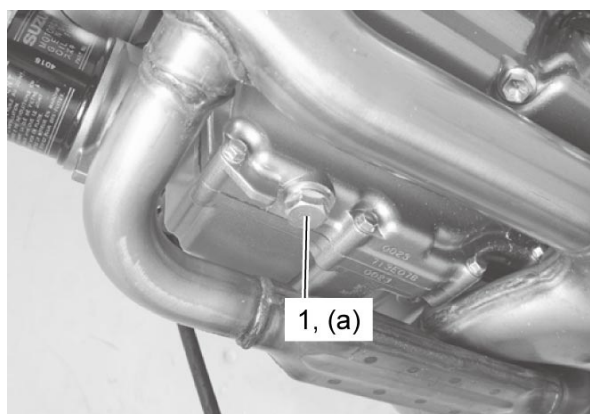


- 6) Pour new oil through the oil filler hole.

**Necessary amount of engine oil**

**Oil change: 2700 ml (2.9 US qt, 2.4 Imp qt)**

**Oil and filter change: 3100 ml (3.3 US qt, 2.7 Imp qt)**

**Engine overhaul: 3500 ml (3.7 US qt, 3.1 Imp qt)**

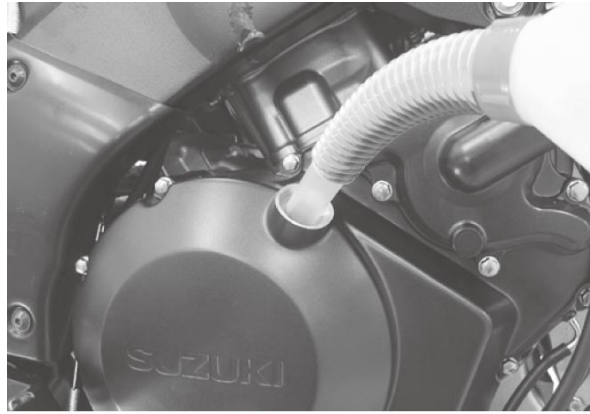

- 7)** Install the oil filler cap.
- 8)** Start the engine and check for oil leakage.
- 9)** Stop the engine and check the engine oil level again.