

1E



## Oil Filter Replacement


- 1) Drain engine oil.
- 2) Remove the oil filter (1) with the special tool.

**NOTE:**

Detach the special tool once the oil filter has come loose, and then remove the filter by hand.

**Special Tool**

(A): [09915-40620](#)

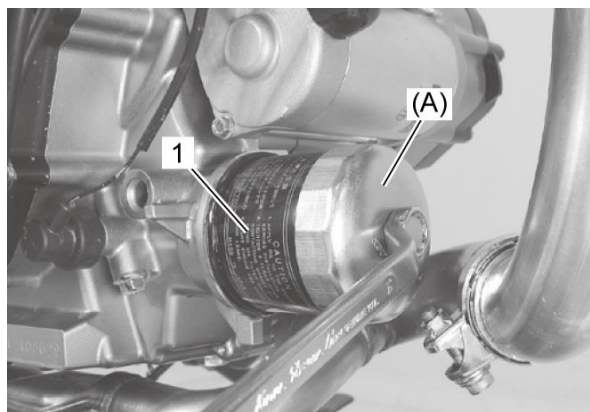

- 3) Apply engine oil lightly to the O-ring of new oil filter (1) before installation.

**NOTICE:**

**ONLY USE A GENUINE SUZUKI MOTORCYCLE OIL FILTER.**

Other manufacturer's oil filters may differ in thread specifications (thread diameter and pitch), filtering performance and durability which may lead to engine damage or oil leaks. Also, do not use a genuine Suzuki automobile oil filter on this motorcycle.

- 4) Install a new oil filter. Turn it by hand until you feel that the oil filter O-ring contacts the oil filter mounting surface. Then, tighten the oil filter two full turns (or to specified torque) with the special tool.

**NOTE:**


To properly tighten the oil filter, use the special tool. Never tighten the oil filter by hand only.


**Special Tool**

(A): [09915-40620](#)

**Tightening torque**

Oil filter (a): 20 N·m (2.0 kgf-m, 14.5 lbf-ft)

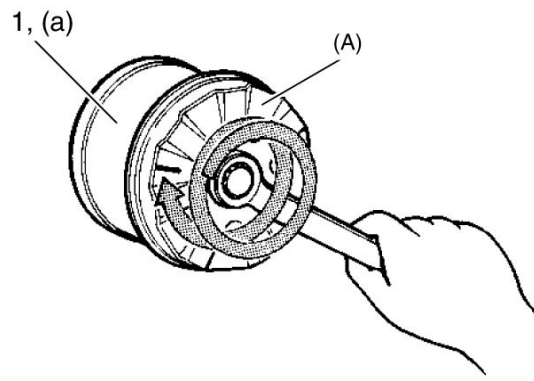

**5)** Add new engine oil. 

**6)** Check the engine oil level. 