

1E



Oil Pressure Regulator Inspection

Refer to [Oil Strainer / Oil Pressure Regulator Removal and Installation](#).

Inspect the operation of the oil pressure regulator (1) by pushing on the piston with a proper bar.
If the piston does not operate, replace the oil pressure regulator with a new one.

