

9C




Oil Pressure Indicator Inspection

NOTE:

Before inspecting the oil pressure switch, check the engine oil level.

- 1) Disconnect the oil pressure switch lead wire (1) from the oil pressure switch.

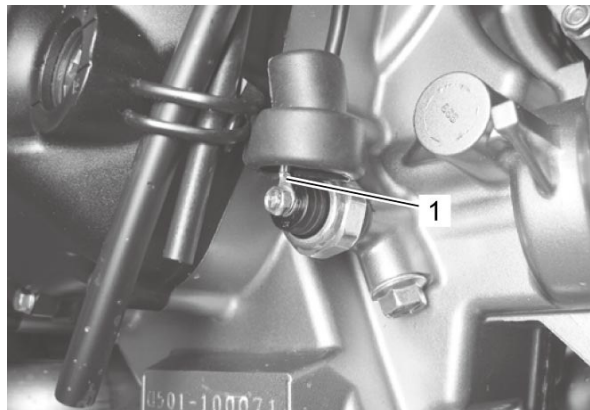

- 2) Turn the ignition switch ON.
- 3) Check if the oil pressure indicator (LED) (2) will light up and indicate the oil pressure indicator (LCD) (3) when grounding the lead wire (1).
If the oil pressure indicator does not light up, replace the combination meter with a new one after checking the connection of couplers.

