


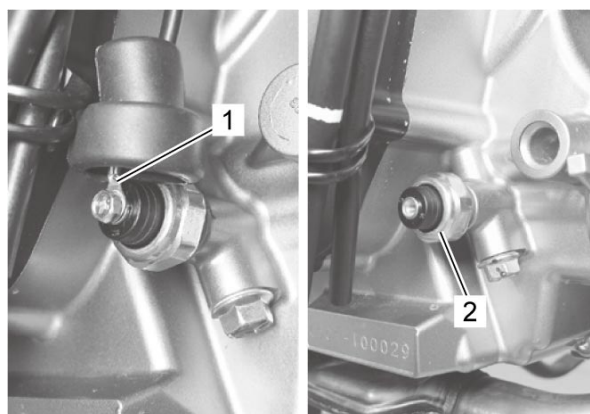
1E



Oil Pressure Switch Removal and Installation

Removal

- 1) Turn the ignition switch OFF.
- 2) Drain engine oil. 
- 3) Disconnect the oil pressure switch lead wire (1).
- 4) Remove the oil pressure switch (2).



Installation

- 1) Install the oil pressure switch (1), apply the sealant to its thread part and tighten it to the specified torque.


NOTE:

Do not apply sealant to oil pressure switch hole.

"A": Sealant 99000-31140 (SUZUKI BOND 1207B)

Tightening torque


Oil pressure switch (a): 14 N·m (1.4 kgf-m, 10.5 lbf-ft)

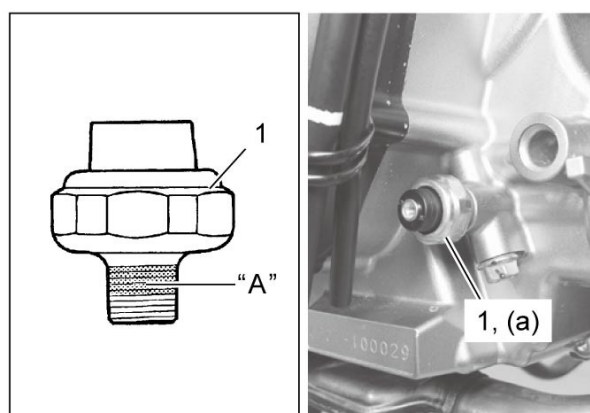

- 2) Connect the oil pressure switch lead wire (1). 

Tightening torque

Oil pressure switch lead wire bolt (a): 1.5 N·m (0.15 kgf-m, 1.0 lbf-ft)

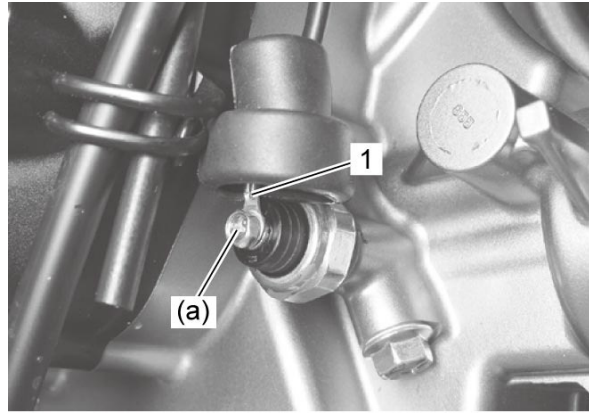

3) Pour engine oil. 