


1F




Cooling Fan Relay Inspection

- 1) Remove the seat.
- 2) Remove the cap and cooling fan relay (1).

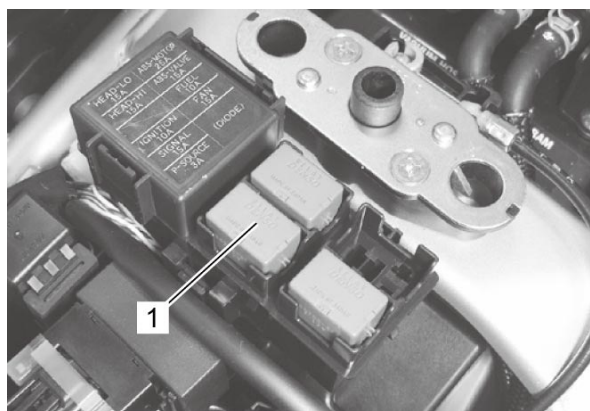

- 3) First check the insulation between (3) and (4) terminals with a circuit tester. Then apply 12 V to (1) and (2) terminals, (+) to (1) and (-) to (2), and check the continuity between (3) and (4). If there is no continuity, replace it with a new one.

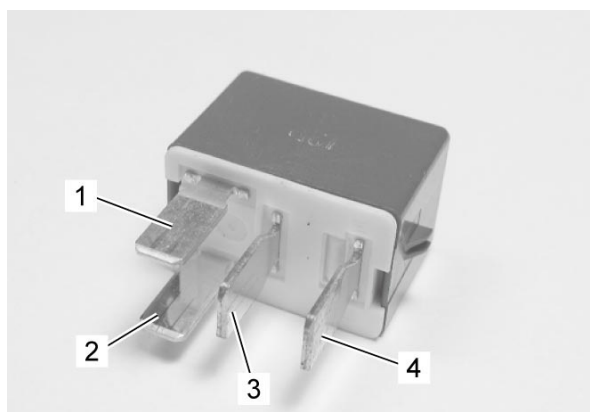

- 4) Install the removed parts.