


1F




## Thermostat Removal and Installation

### Removal

- 1) Drain engine coolant.
- 2) Remove the throttle body.
- 3) Place a rag under the thermostat connector cap (1) and then remove the thermostat connector cap (1).

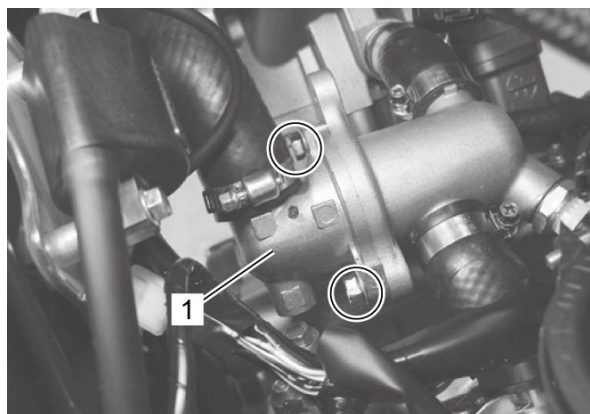

- 4) Remove the thermostat (1).

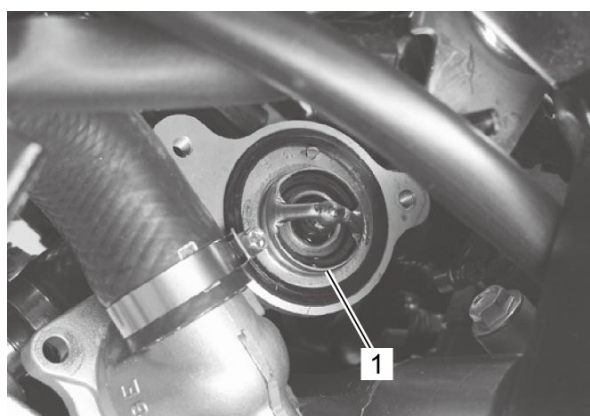


### Installation

Install the thermostat in the reverse order of removal. Pay attention to the following points:

- Install the thermostat (2).

**NOTE:**


**The jiggle valve (1) of the thermostat faces upside.**

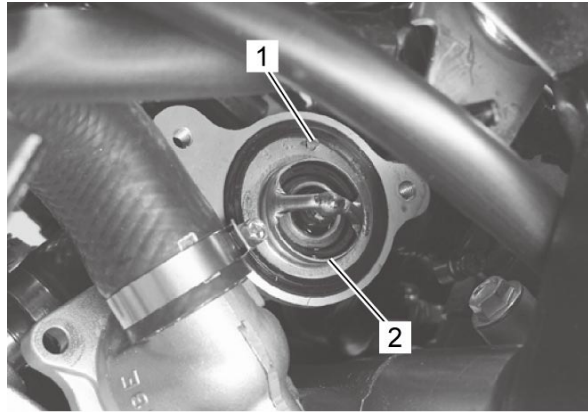

- Install the thermostat connector cap (1) and tighten the bolts (2) to the specified torque.

**Tightening torque**

**Thermostat connector cap bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)**

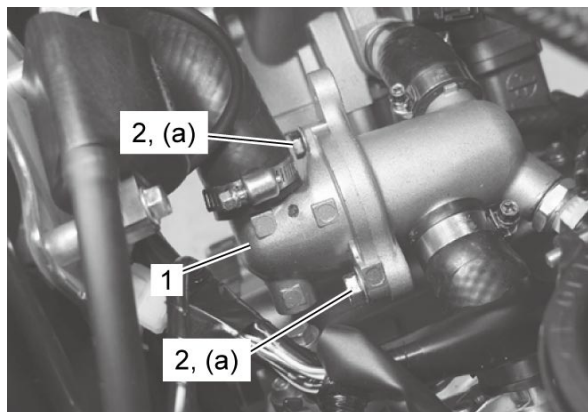

- Pour engine coolant and bleed air from the cooling system.  
Refer to [Engine Coolant Replacement](#) and [Air Bleeding of Engine Cooling System](#).