

1F




Radiator Inspection and Cleaning

Inspection

[Reference: Radiator / Cooling Fan Motor Removal and Installation](#)

- 1) Inspect the radiator for coolant leaks. If any defects are found, replace the radiator with a new one.
- 2) If the fins are bent or dented, repair them by carefully straightening them with the blade of a small screwdriver.

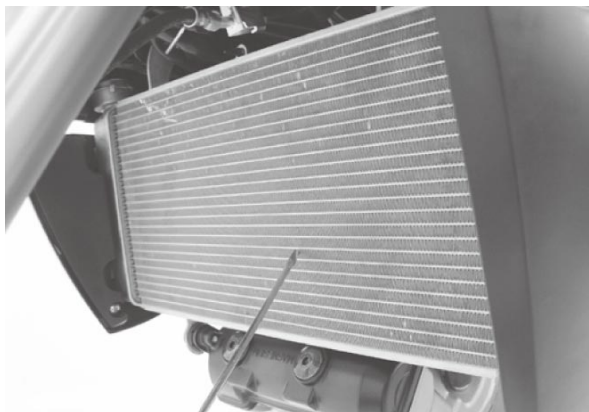

- 3) Install the removed parts.

Cleaning

- 1) Remove the fuel tank side covers.
- 2) Blow out any foreign matter that is stuck in the radiator fins using compressed air.

NOTICE:

- Do not bend the fins when using compressed air.
- Apply compressed air from the engine side. If compressed air is applied from the other side, dirt will be forced into the pores of radiator.

