


1F



Radiator Reservoir Tank Removal and Installation

Removal


- 1) Lift and support the fuel tank.
- 2) Disconnect the overflow hose (1).
- 3) Remove the reservoir tank bracket bolts (2).
- 4) Remove the reservoir tank (3).

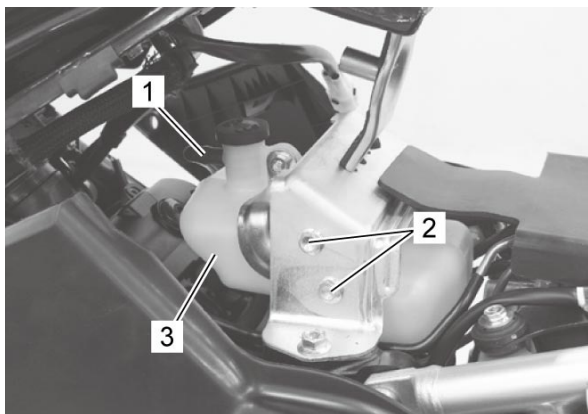

- 5) Disconnect the reservoir tank inlet hose (1) and drain the engine coolant.



- 6) Remove the reservoir tank bracket (1).

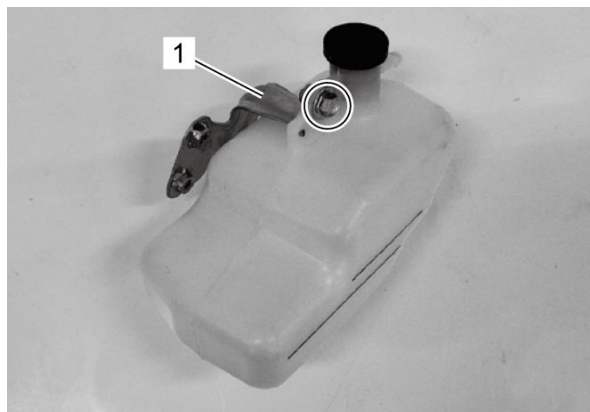

Installation


Install radiator reservoir tank in the reverse order of removal. Pay attention to the following points:

- Apply thread lock to the reservoir tank mounting bolt (1) and then tighten the bolt (1) to the specified torque.

"A": Thread lock cement 99000-32150 (THREAD LOCK CEMENT 1322D)

Tightening torque


Reservoir tank mounting bolt (a): 6 N·m (0.6 kgf-m, 4.5 lbf-ft)

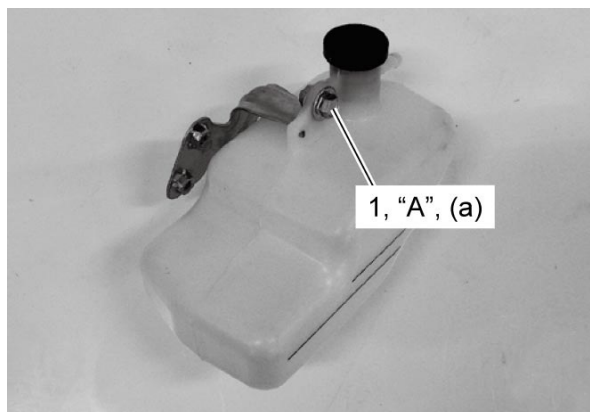

- Tighten the reservoir tank bracket bolts (1) to the specified torque.

Tightening torque

Reservoir tank bracket bolt (a): 11 N·m (1.1 kgf-m, 8.0 lbf-ft)

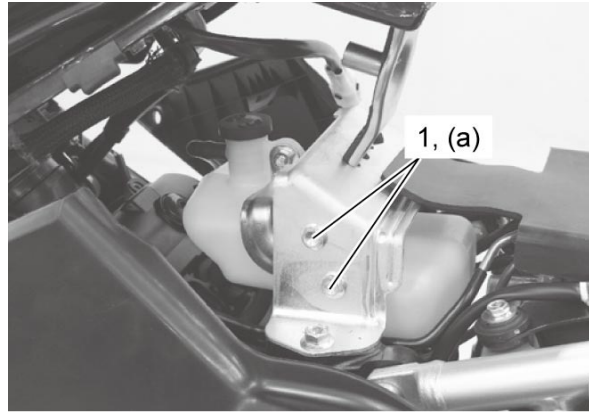

- Fill the reservoir tank to the upper level (1). 