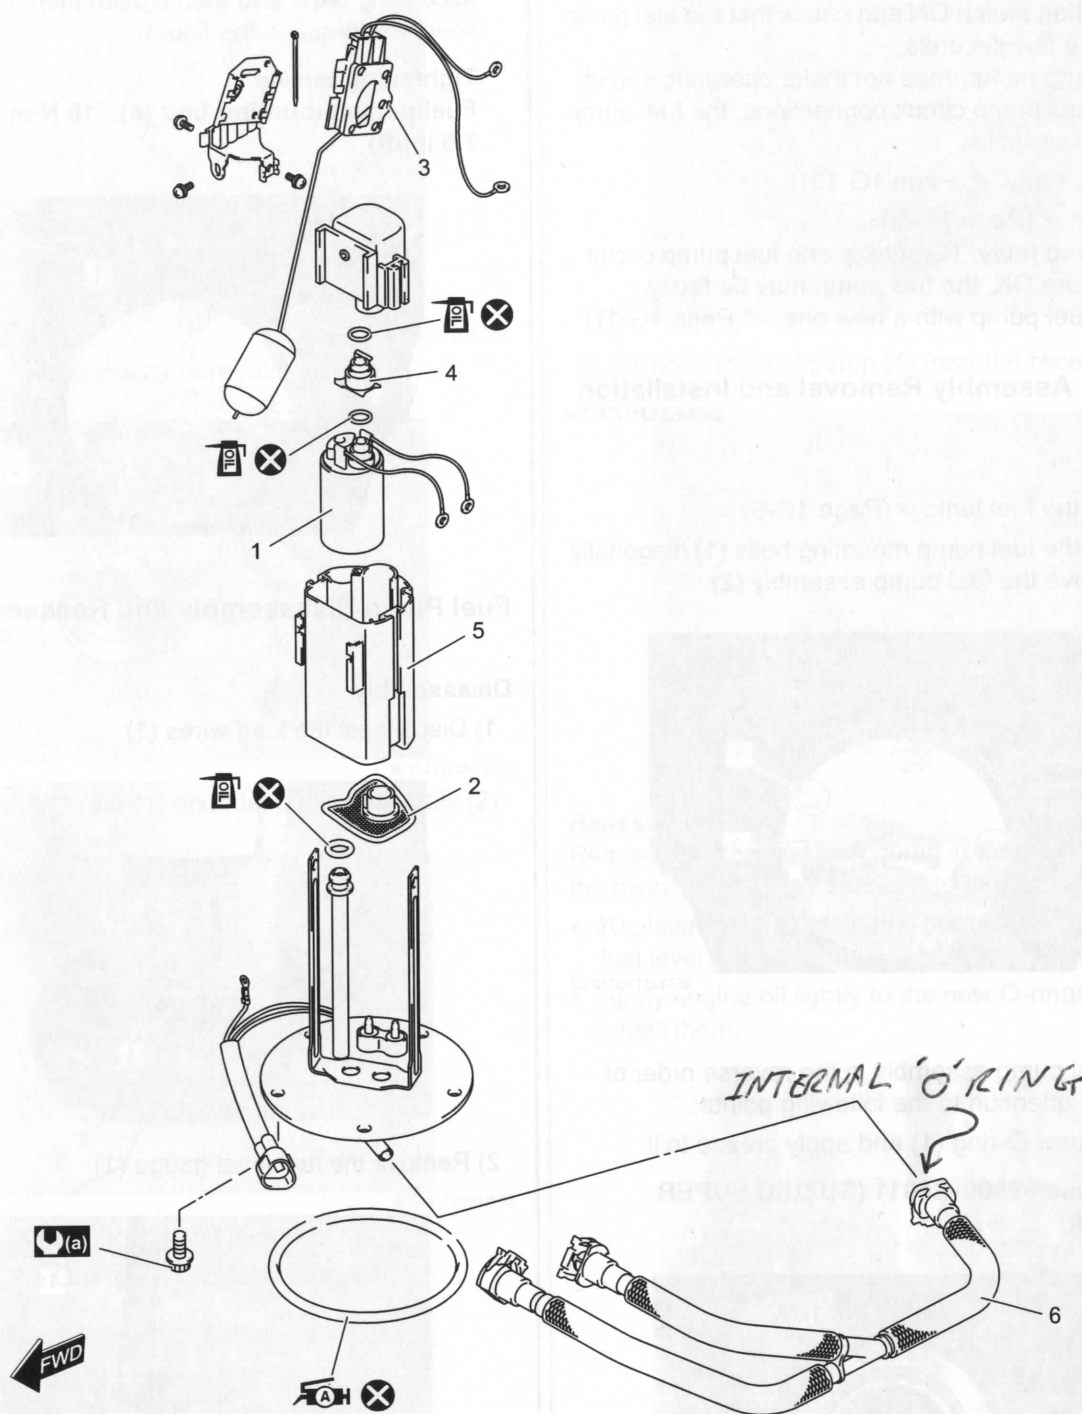


 



Fuel Pump Components



IE31J1170045-02

1. Fuel pump	5. Reservoir cup	 : Apply engine oil.
2. Mesh filter	6. Fuel feed hose	 : Do not reuse.
3. Fuel level gauge	 (a) : 10 N·m (1.0 kgf·m, 7.5 lbf·ft)	
4. Fuel pressure regulator	 : Apply grease.	