

1G




Fuel Pump Assembly Removal and Installation

[Reference: Fuel Pump Components](#)

Removal

- 1) Remove the fuel tank.
- 2) Remove the fuel pump mounting bolts (1) diagonally and remove the fuel pump assembly (2).

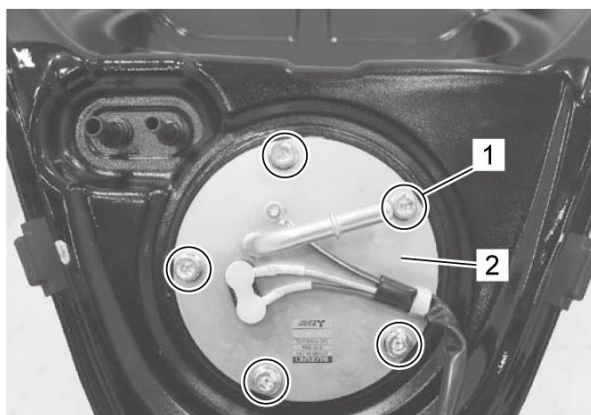


Installation

Install the fuel pump assembly in the reverse order of removal. Pay attention to the following points:

- Install the new O-ring (1) and apply grease to it.

"A": Grease 99000-25011 (SUZUKI SUPER GREASE A)

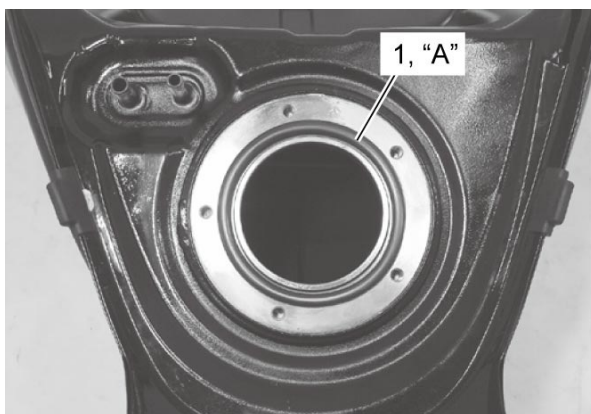

- Install the fuel pump assembly (1) and first tighten all the fuel pump mounting bolts (2) lightly in the ascending order and then tighten them to the specified torque in the figure.

Tightening torque

Fuel pump mounting bolt (a): 10 N·m (1.0 kgf-m, 7.5 lbf-ft)

