

1G



Fuel Pump On-Vehicle Inspection

Turn the ignition switch ON and check that the fuel pump operates for a few seconds.

If the fuel pump motor does not make operating sound, inspect the fuel pump circuit connections, the fuel pump relay and TO sensor.

- Fuel pump relay:
- TO sensor:

If the fuel pump relay, TO sensor and fuel pump circuit connections are OK, the fuel pump may be faulty, replace the fuel pump with a new one.