

1G



## Fuel Level Gauge Inspection

Refer to [Fuel Pump Assembly Removal and Installation](#).

- Measure the resistance at each fuel level gauge in float position. If the resistance is incorrect, replace fuel level gauge with a new one.

Float position		Resistance
"a"	275.6 mm (10.85 in)	Approx. 10 $\Omega$
"b"	65.1 mm (2.56 in)	Approx. 216 $\Omega$

