


## Fuel Injector / Fuel Delivery Pipe Removal and Installation

**NOTE:**

The fuel injector can be removed without removing the throttle body.

### Removal

- 1) Remove the air cleaner box.
- 2) Place a rag over the fuel feed hose and disconnect the fuel feed hose.
- 3) Disconnect the fuel injector couplers (1).

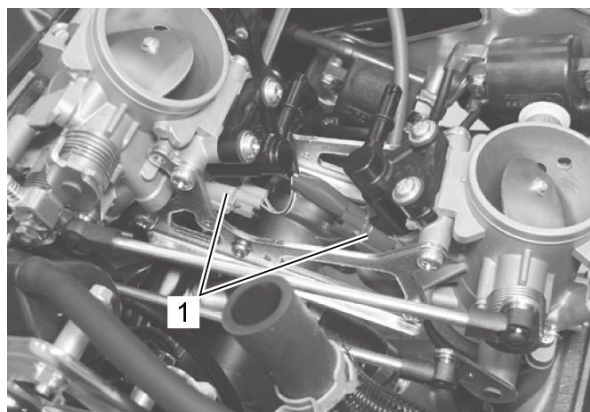


- 4) Remove the fuel injectors from fuel delivery pipes.

### Installation

Install the fuel injector in the reverse order of removal. Pay attention to the following points:

- When installing the fuel delivery pipes and fuel injectors to the throttle body, refer to [Throttle Body Disassembly and Reassembly](#).
- Connect the fuel injector couplers to the fuel injector. Make sure that each coupler is installed in the correct position. The color on each lead wire refers to the appropriate fuel injector.

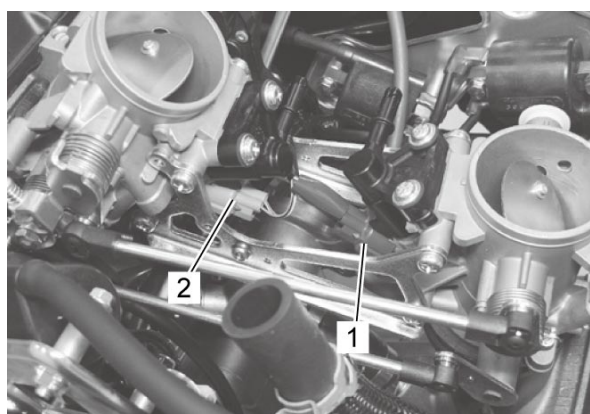

Coupler	Wire color
Front injector (1)	Y/R and Gr/W

Rear injector (2)	Y/R and Gr/B
-------------------	--------------