


1G



Fuel Feed Hose Disconnection and Reconnection


Disconnection

- 1) Pull the retainer (1).
- 2) Disconnect the fuel feed hose joint (2) from fuel pipe.

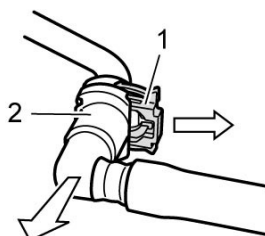

Reconnection

- 1) Insert the fuel feed hose joint (1) to fuel pipe.
- 2) Lock the retainer (2).

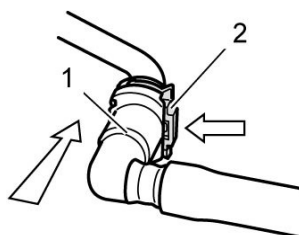

- 3) Confirm that fuel feed hose joint is not disconnected by hand.