


1G



Fuel Pressure Inspection

- 1) Lift and support the fuel tank.
- 2) Place a rag over the fuel feed hose and disconnect fuel feed hose (1).

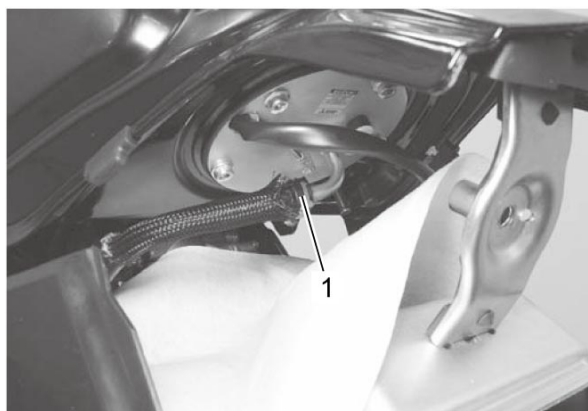

- 3) Install the special tools between the fuel pump and fuel feed hose.


Special Tool

(A): [09940-40211](#)

(B): [09940-40220](#)

(C): [09915-77331](#)

(D): [09915-74521](#)

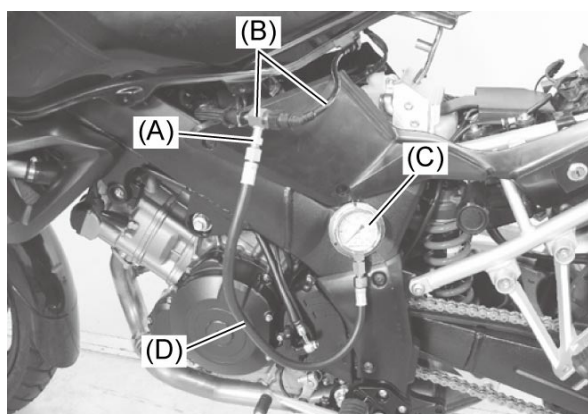

- 4) Turn the ignition ON and check for fuel pressure.
If the fuel pressure is lower than the specification, check for the followings:
 - Fuel hose leakage
 - Clogged fuel filter
 - Pressure regulator
 - Fuel pumpIf the fuel pressure is higher than the specification, check for the followings:
 - Fuel pump
 - Pressure regulator

Fuel pressure

Approx. 300 kPa (3.0 kgf/cm², 43 psi)

- 5) Remove the special tools.

⚠ WARNING:

Before removing the special tools, turn the ignition switch OFF and release the fuel pressure slowly.

- 6) After finishing the fuel pressure inspection, install the removed parts.