



1G




Fuel Tank Removal and Installation

Removal

- 1) Remove the seat.
- 2) Remove the fuel tank center cover.
- 3) Remove the fuel tank side covers.
- 4) Remove the frame cover screws (1).

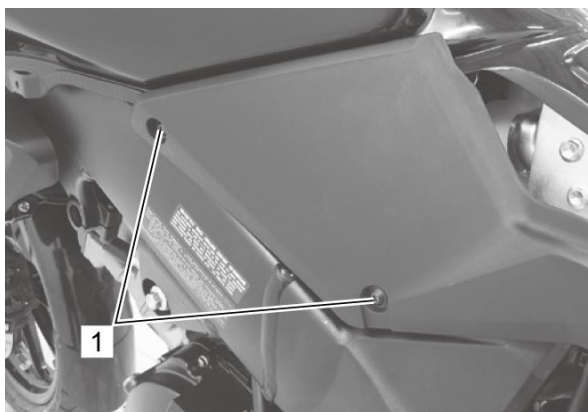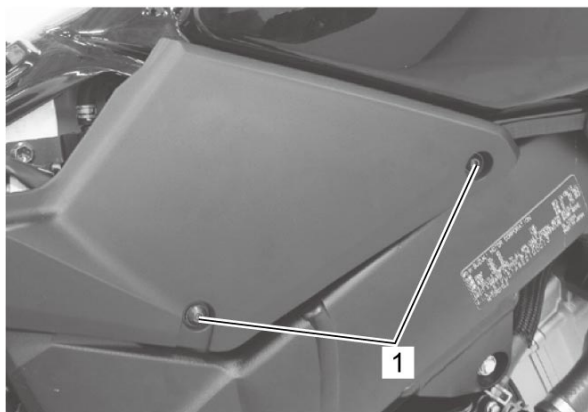


- 5) Remove the fuel tank rear mounting bolt (1), fuel tank mount stay (2) upper cushion (3) and lower cushion (4).

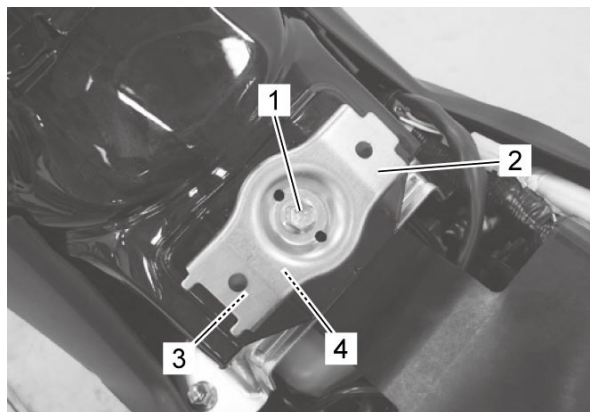


- 6)** Lift and support the fuel tank with the fuel tank mounting stay (1).


NOTICE:

Lifting up the fuel tank by force can damage the hoses and wiring harness.

- 7)** Disconnect the fuel pump lead wire coupler (2).
8) Place a clean rag under the fuel feed hose (3) and disconnect the fuel feed hose (3). 
9) Disconnect the fuel tank breather hose (4) and fuel tank water drain hose (5).

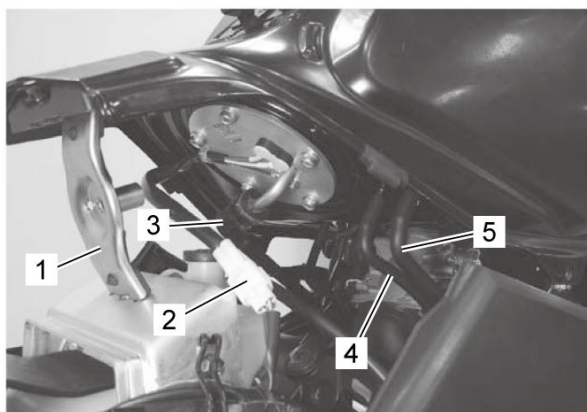

- 10)** Remove the fuel tank front mounting bolts (1).

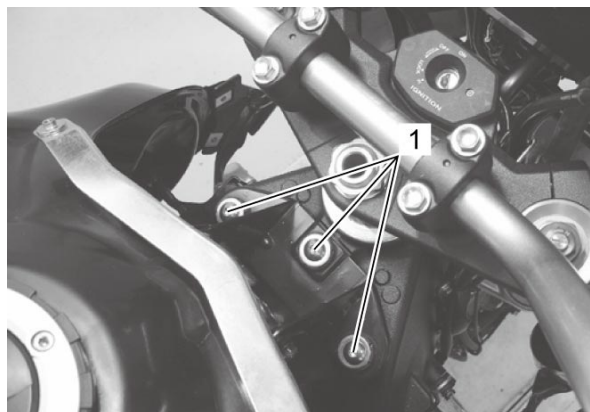



Installation

Install the fuel tank in the reverse order of removal. Pay attention to the following point:

NOTICE:

Be sure not to bend or twist the hoses when installing.

- Connect the fuel tank water drain hose (1) and breather hose (2).

NOTE:

Connect the fuel feed hose (3) to the fuel pump until it locks securely.

