



0A



## Electrical Components Location

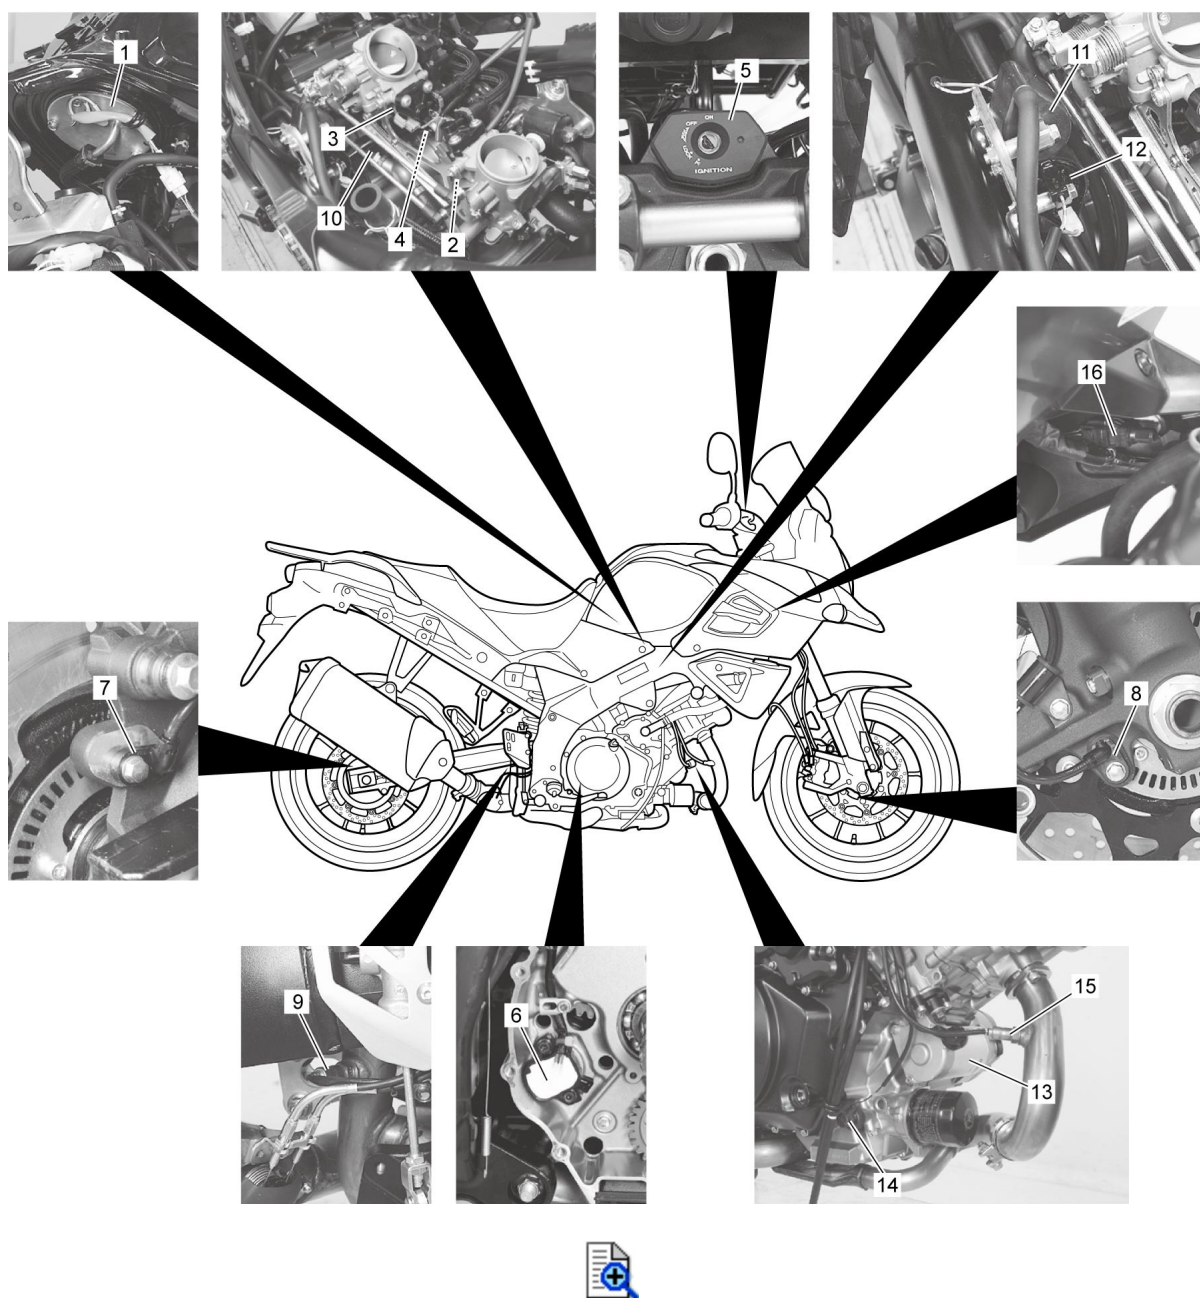

1.	Fuel pump/Fuel level gauge	7.	Rear wheel speed sensor	13.	Starter motor
2.	Fuel injector #1	8.	Front wheel speed sensor	14.	Oil pressure switch
3.	Fuel injector #2	9.	HO2 sensor #2	15.	HO2 sensor #1
4.	EVAP system purge control solenoid valve (If equipped)	10.	ECT sensor	16.	Ambient air temperature sensor
5.	Immobilizer antenna (If equipped)	11.	Ignition coil #1 (center)		
6.	GP switch	12.	Ignition coil #2 (side)		

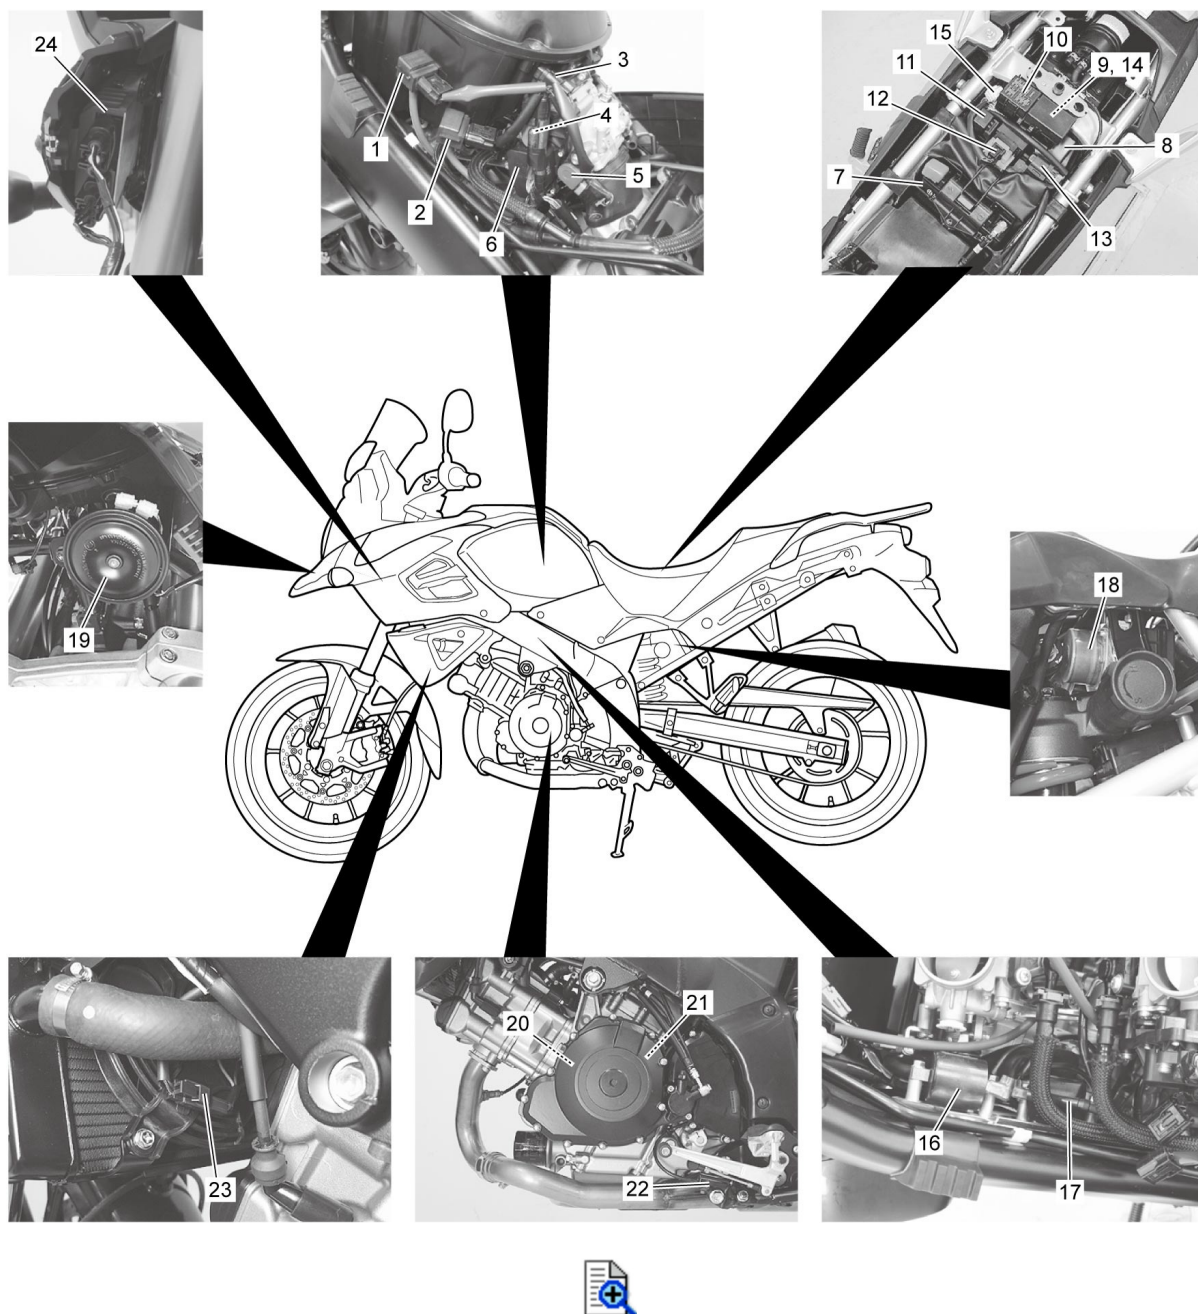

1.	IAP sensor #1	6.	STV/ISC actuator	11.	Turn signal relay	16.	Ignition coil #1 (side)	21.	CKP sensor
2.	IAP sensor #2	7.	Battery	12.	Starter relay/main fuse	17.	Ignition coil #2 (center)	22.	Side-stand switch
3.	IAT sensor	8.	ECM	13.	TO sensor	18.	ABS control unit/HU	23.	Cooling fan
4.	STP sensor	9.	Cooling fan relay	14.	Fuel pump relay	19.	Horn	24.	Regulator/rectifier
5.	TP sensor	10.	Fuse box	15.	Mode select coupler	20.	Generator		