


1H



Engine Stop Switch Inspection

- 1) Turn the ignition switch OFF.
- 2) Remove the air cleaner box.
- 3) Disconnect the right handlebar switch coupler (1).

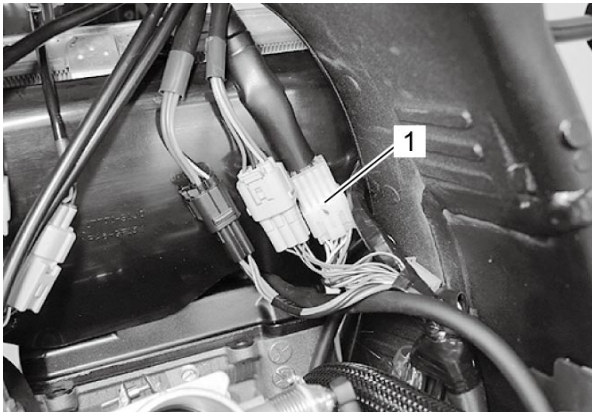

- 4) Inspect the engine stop switch for continuity with a tester.
If any abnormality is found, replace the right handlebar switch assembly with a new one.

Color Position	O/B	O/W
OFF (X)		
RUN (O)		



- 5) After finishing the engine stop switch inspection, install the removed parts.